

■ ASSEMBLY INSTRUCTIONS

Foot Sealer **FS-358F, FS-458F, FS-658F**


***Always unplug the unit from the power source before making any repairs.*

Part #s can be located in the spare parts diagram

Step 1. Attach the standing tube (F2) to the base (L5). Tighten the base screw (I6) to lock the tube in place.

Step 2. Attach the foot pedal (L6) to the base (L5). Tighten screws on base to secure the foot pedal.

Step 3. Position the skull on the standing tube. Secure the skull to the standing tube with screws (10) on both sides of skull.


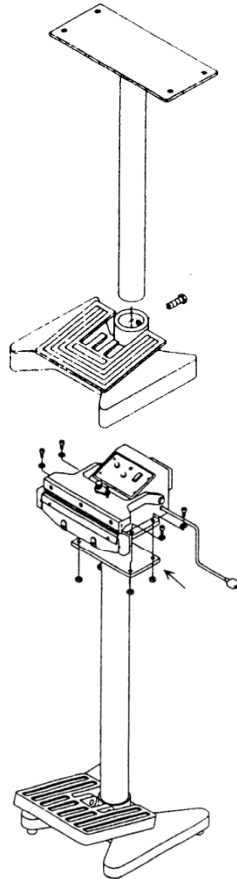


Step 4. Insert the pulling plate/short pulling pole (F8+F9) through the small spring (S10) and set it on top of the upper jaw (L2). Place the large spring (C8) on the lower jaw.

Step 5. Connect the upper part of the pulling pole (F4) to the pulling plate/short pulling pole (F8+F9). Press down on the lower jaw and insert the cross bar at the end of the lower pulling pole (F3) into the notches on the foot pedal.

Please note: The length of the pulling pole can be adjusted with the nut (C3). To lengthen, turn clockwise and to shorten, turn counterclockwise.

Step 6. Check the correct length of the pulling pole by pressing down the pedal. The upper jaw and lower jaw should touch when the foot pedal is pressed. If not, adjust the length.

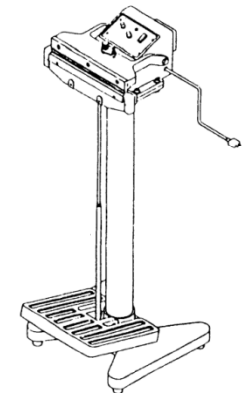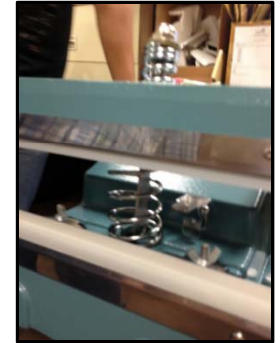

■ ASSEMBLY INSTRUCTIONS

Foot Sealer **FS-358F, FS-458F, FS-658F**

****Always unplug the unit from the power source before making any repairs.**

