


■Hand Sealers w/ Cutter (TISH-202C, 205C, 302C, 305C)

Spare Parts **DIAGRAM**

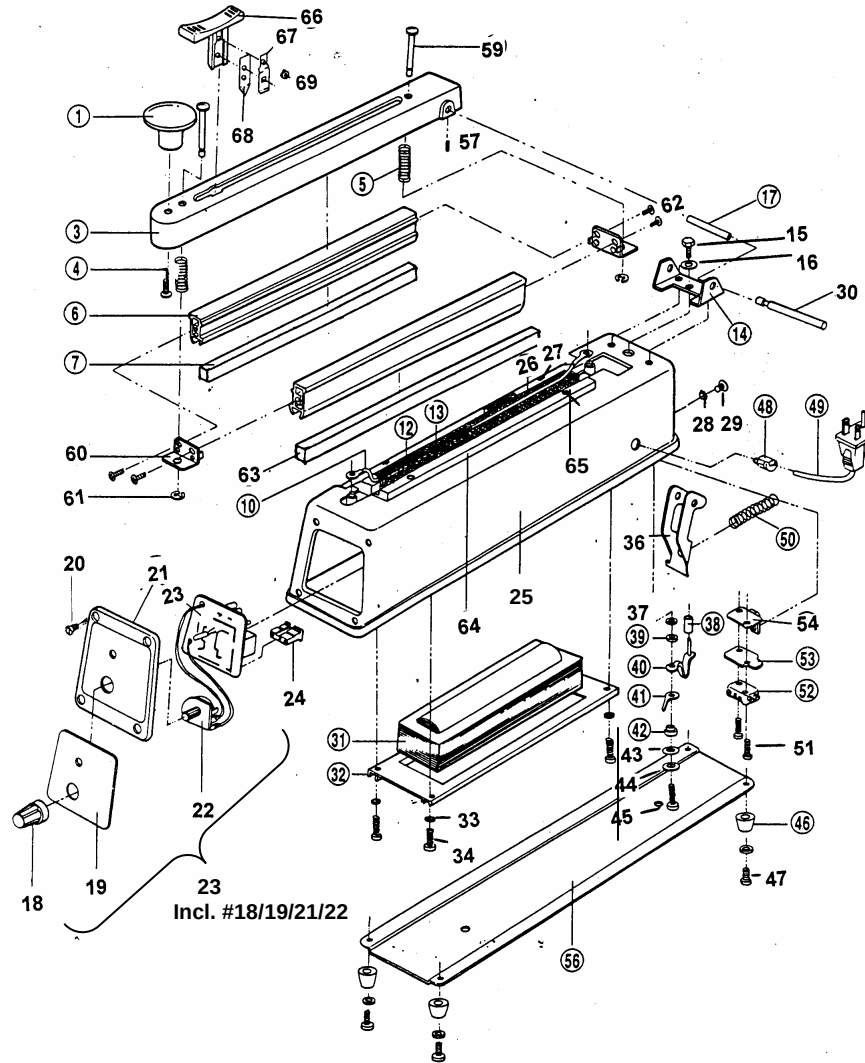

MyBinding.com
 5500 NE Moore Court
 Hillsboro, OR 97124
 Toll Free: 1-800-944-4573
 Local: 503-640-5920

No.	Description	No.	Description	No.	Description
1	Handle Button	25	Body	49	Power Cord
2	Screw (not shown)	26	Teflon Cover Plate	50	Microswitch Level Spring
3	Handle Button	27	Screw	51	Screw
4	Screw	28	Washer	52	Microswitch
5	Silicon Rubber Holder Spring	29	Screw	53	MS Insulating Plate
6	Silicon Rubber Holder	30	Fixed Pole of Handle	54	MS Adjusting Plate
7	Silicon Rubber	31	Transformer	55	Ms Fixed Plate (TISH-100,200)
8	Screw (none)	32	Transformer Pressboard	56	Bottom Plate
9	Washer(none)	33	Washer	57	Setting Screw
10	Heating Element	34	Screw	58	Name Plate (TISH-300,400,500)
11	Ground (none)	35	Connector (not shown)	59	Shaft / Pin
12	Teflon Cover 1 3/4"	36	Mounting Spring Movable Plate	60	Bracket
13	Teflon Adhesive 1/2"	37	Washer	61	E Clip
14	Fixed Seat of Handle	38	Bakelite Pipe	62	Screw
15	Hexagon Nut	39	Insulating Washer	63	Silicon Rubber/Cutter
16	Spring Washer (TISH-100,200)	40	Bow Spring	64	Bag Fixing Plate
17	Fixed Shaft Linear of Handle	41	Brass Contact	65	Screw for Bag Fixing Plate
18	Time Adjusting Knob	42	Convex Bakelite	66	Cutter Bracket
19	Time Indicating Plate	43	Washer	67	Blade Holder
20	Screw	44	Washer	68	Blade
21	Cover of Timer	45	Screw	69	Screw (not shown) "new model"
22	Variable Resistor	46	Rubber Foot		
23	Timer (incl. #18, 19, 21, 22, 23)	47	Screw		
24	Connector	48	Bushing		