

■TROUBLE SHOOTING – HAND SEALERS

Changing the Cutting Blade

NOTE: Please use caution when using making changes to your cutting blade. Edges are **SHARP**.

Remove Cutting Blade Holder from Sealer

To remove the cutting blade holder from your sealer, please push the cutting blade holder to the grove near the front of the sealer.



Unscrew the old blade and replace with a new blade.



MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920