


■TROUBLE SHOOTING – AUTO SEALERS - TISA

Loose Wire Connection


Sometimes the connections become loose during shipping or sharp movements and needs some simple adjustments.

Note: Unplug unit before making any changes.

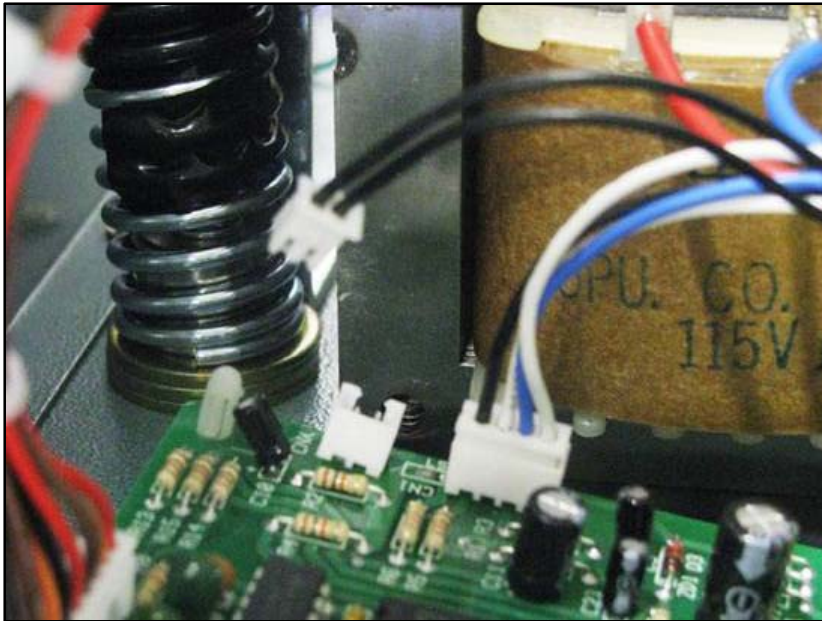

PC Board

Make sure all the wires on the PC Board are connected

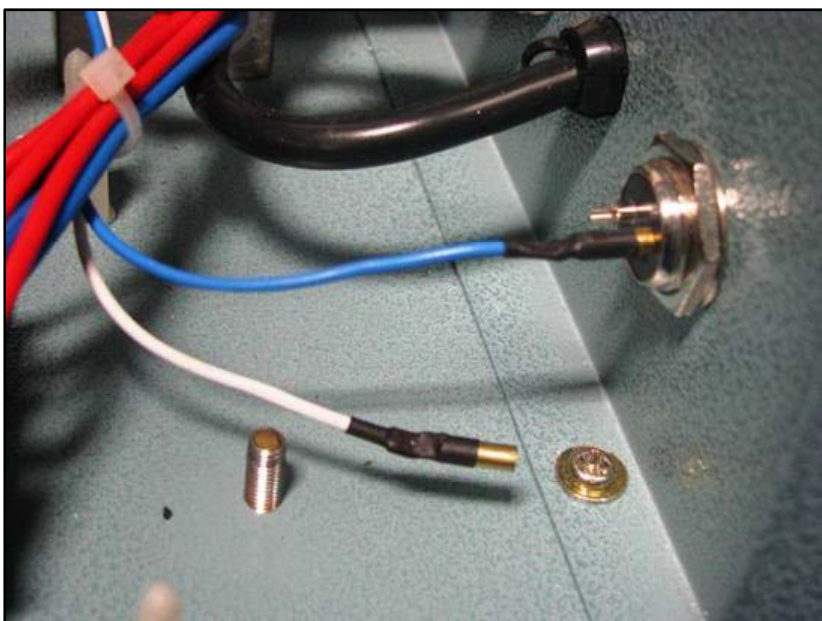

Foot Switch –

Check the wire to the foot switch if the foot switch is not working.

MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920