

■TROUBLE SHOOTING – FS LONG HAND

Microswitch



Sometimes the microswitch is moved out of alignment (during shipping or sharp movements) and needs a simple adjustment to get the unit back to proper working order.


Note: Unplug unit before making any changes.

Check for the “Click”

The microswitch activates the electrical current to heat the element. When the user pushes the sealer arm down, the microswitch lever pushes the microswitch actuator to activate the electrical current. The user should hear the “click” of the microswitch activation. If the “click” is not present or intermittent, this means the microswitch is not triggered and no electrical current is passing through.

Locate the Microswitch

For the FS Long Hand sealers, the microswitch is found on the left side of the sealer base (the “guts”). Carefully remove the base cover in order to access the microswitch.

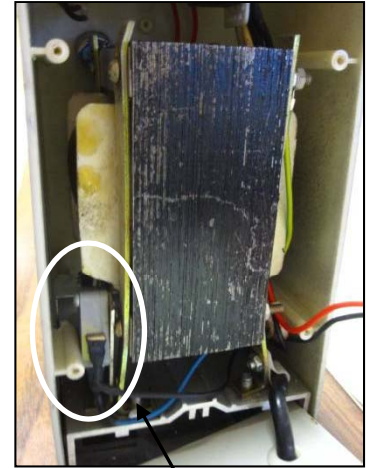


microswitch

Microswitch Adjustment Troubleshooting

- Make sure the microswitch is screwed tightly to its base. If not, tighten.
- **Make sure the microswitch lever touches the middle of the wheel on the microswitch actuator. We have found that the microswitch actuator sometimes moves during shipping. Carefully push or pull the microswitch actuator to ensure the wheel is evenly aligned with the microswitch lever.**

If you continue to experience issues, please do not hesitate to contact us.

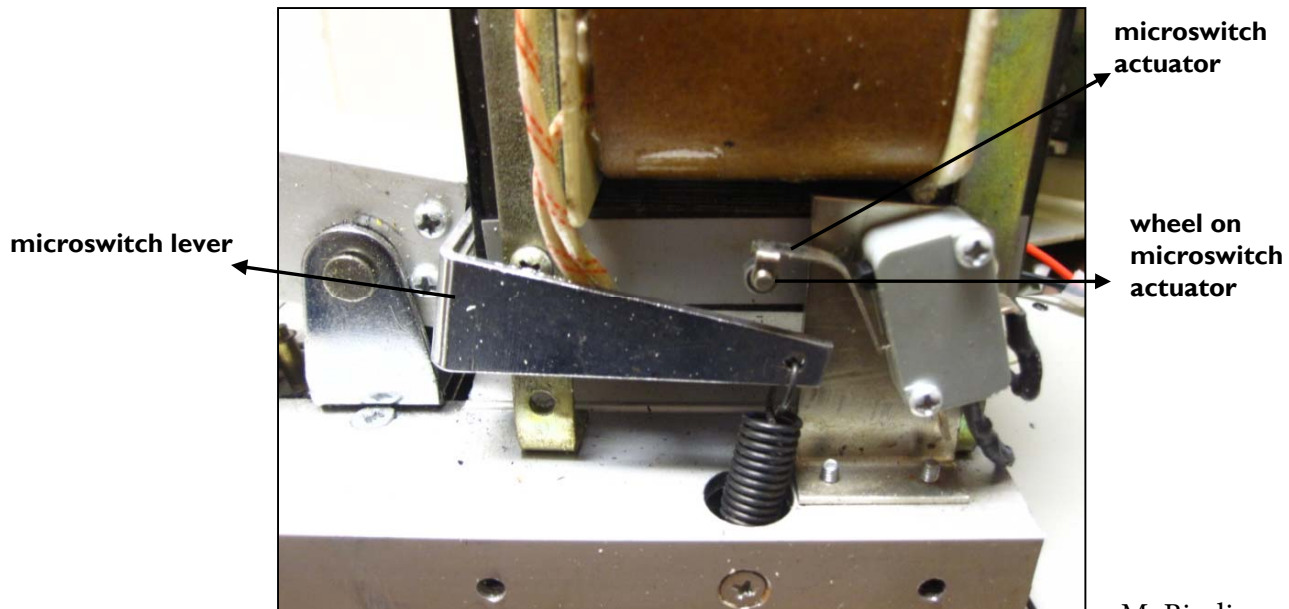

MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920