


■ TROUBLE SHOOTING – WN LONG HAND

Cutter Bracket

Warning: The blade is **SHARP**. Use caution when handling the blade.

Note: Unplug unit before making any changes.

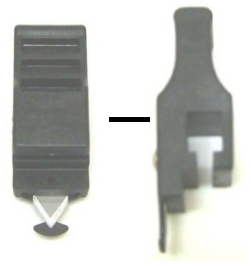

WN-Long Hand Sealers w/ Cutter units are equipped for seal and cut applications. The cutter unit can cut through all types of poly material. For certain applications, we recommend making this quick change to the cutter protector (Part #71) for a smoother cutting process.



Step 1. Remove Cutter Holder from Bracket

To remove the cutter bracket, you must first unscrew the screws from the cutter bracket (Part #69).

Slide the cutter holder from the cutter bracket.



Step 2. Adjust the Cutter Protector

Unscrew the cutter protector (Part #71) from the blade and cutter holder. Using scissors or a knife, cut off the area beneath the screw holes. This allows more access to the blade when you are cutting your material.



Step 3. Replace Cutter Protector

Put the cutter protector, blade and cutter holder back together. Screw in place. Place back on cutting bracket.

MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920