

WRA163227 Retarder Bracket Replacement

1. Disconnect the power cord.
2. Remove the blade cover by prying off with a coin or flat screwdriver in the notch above the blade area.
3. Remove the old holdback assembly by prying the retaining ring off the shaft near the spring.
4. Carefully unhook the spring from under the lip on the plastic column. Note the position of the spring for re-assembly.
5. Remove the holdback assembly from the shaft by pulling straight outward. Be careful not to damage the spring.
6. Install the retarder brkt. and spring in the reverse order. It may be necessary to pull the shaft out in order to snap the ring back into the groove, trapping the spring and bracket against the plastic column.
7. Hook the spring back under the plastic lip and reinstall the blade cover, making sure it snaps securely in place.

