




Air Suction Folder Model 1800S

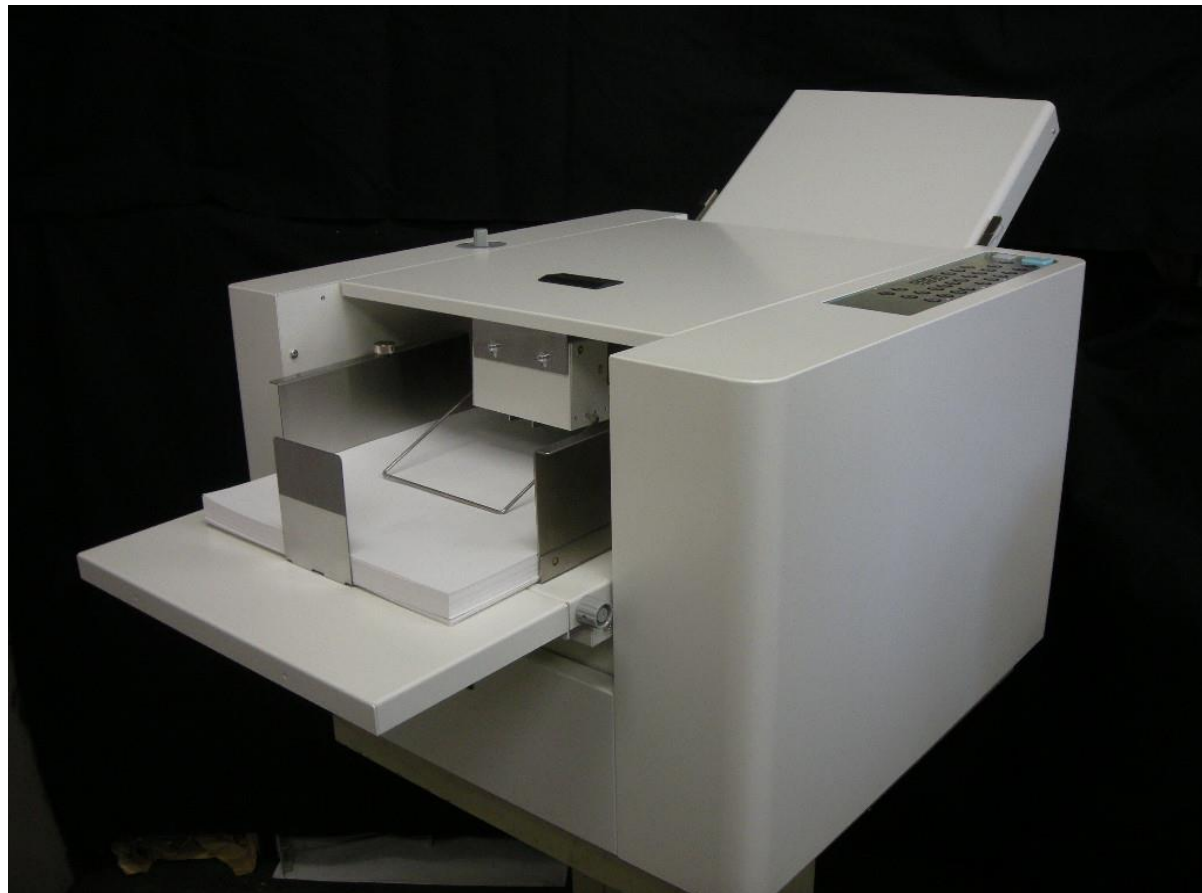

MBM Corporation

INDEX

0. Screw, nuts, washers, to be used for folders	3
1. A01 ; Cover of the body	4、5
2. A02 ; Sideplate of the body	6、7
3. A10 ; Paper feed table	8、9
4. A11 ; Lifting table	10、11
5. A12 ; Assembly of Lifting screw	12、13
6. A13 ; Assembly of Lifting motor	14、15
7. A20 ; Assembly of Paper guide	16、17
8. A21 ; Interceptor unit	18、19
9. A22 ; Feed roller unit	20、21
10. A25 ; Main motor unit	22、23
11. A26 ; Assembly of links	24、25
12. A31 ; 1st Folder table	26、27
13. A32 ; 2nd Folder table	28、29
14. A40 ; Baseframe of the body	30、31
15. A42 ; Separator air control unit	32、33
16. A44 ; Operation switching unit	34、35
17. A50 ; Paper ejection table	36、37
18. A58 ; Paper ejection auxiliary table	38、39
19. A60 ; Paper suction unit	40、41
20. A65 ; Paper separator unit	42、43

Screw, nuts, washers, to be used for folders

Description of parts (screw,E-ring, spring pin, etc.) illustrated

* Orders for screws, washers, etc. should be given based on a minimum lot of 30 per item to facilitate shipping.

(We ask that orders be given at one time for as many items as possible.)

Parts ref No.	Parts Name	Size
RK	: Round head screw (30 pcs/set)	1-4mm
		5mm or more
RKSW	: Round head screw with spring washer (30 pcs/set)	1-4mm
		5mm or more
RKWS	: Flat washer and round head screw with spring washer (30 pcs/set)	
HB	: Hexagon head screw (30 pcs/set)	
SK	: Countersunk head screw (30 pcs/set)	
HS	: Hexagon socket set screw (30 pcs/set)	
BD	: Bind screw (30 pcs/set)	
TP	: Self-tapping screw (RKTP...pan head, SKTP...countersunk) (30 pcs/set)	
N	: Nut (30 pcs/set)	1-6mm
		6mm or more
SW	: Spring washer (30 pcs/set)	
W	: Flat washer (30 pcs/set)	
SP	: Spring pin (30 pcs/set)	1-3mm
		4mm or more
E	: E-type stopper ring (E ring) (30 pcs/set)	1-8mm
		10mm
ST	: Tap tight screw (RKST...pan head, RKST...countersunk) (30 pcs/set)	
WW	: Wave washer (30 pcs/set)	
RKPT	: P tight screw (30 pcs/set)	
	Cap screw (30 pcs/set)	

Example:

RKSW4×6-2 : Two round head screws with spring washer 4mm in diameter, 6mm long

RKWS4×8 : One round head screw with spring washer 4mm in diameter, 8mm long

HS4×6 : One hexagon socket set screw 4mm in diameter, 6mm long

N, SW4 : One each of spring washer 4mm in diameter plus nut


SP3×20 : One spring pin 3mm in diameter, 20mm long

E4-2 : Two 4mm E rings


[Note]

• Prices shown are unit prices for single parts. They do not include consumption tax.


1. A01 ; Cover of the body

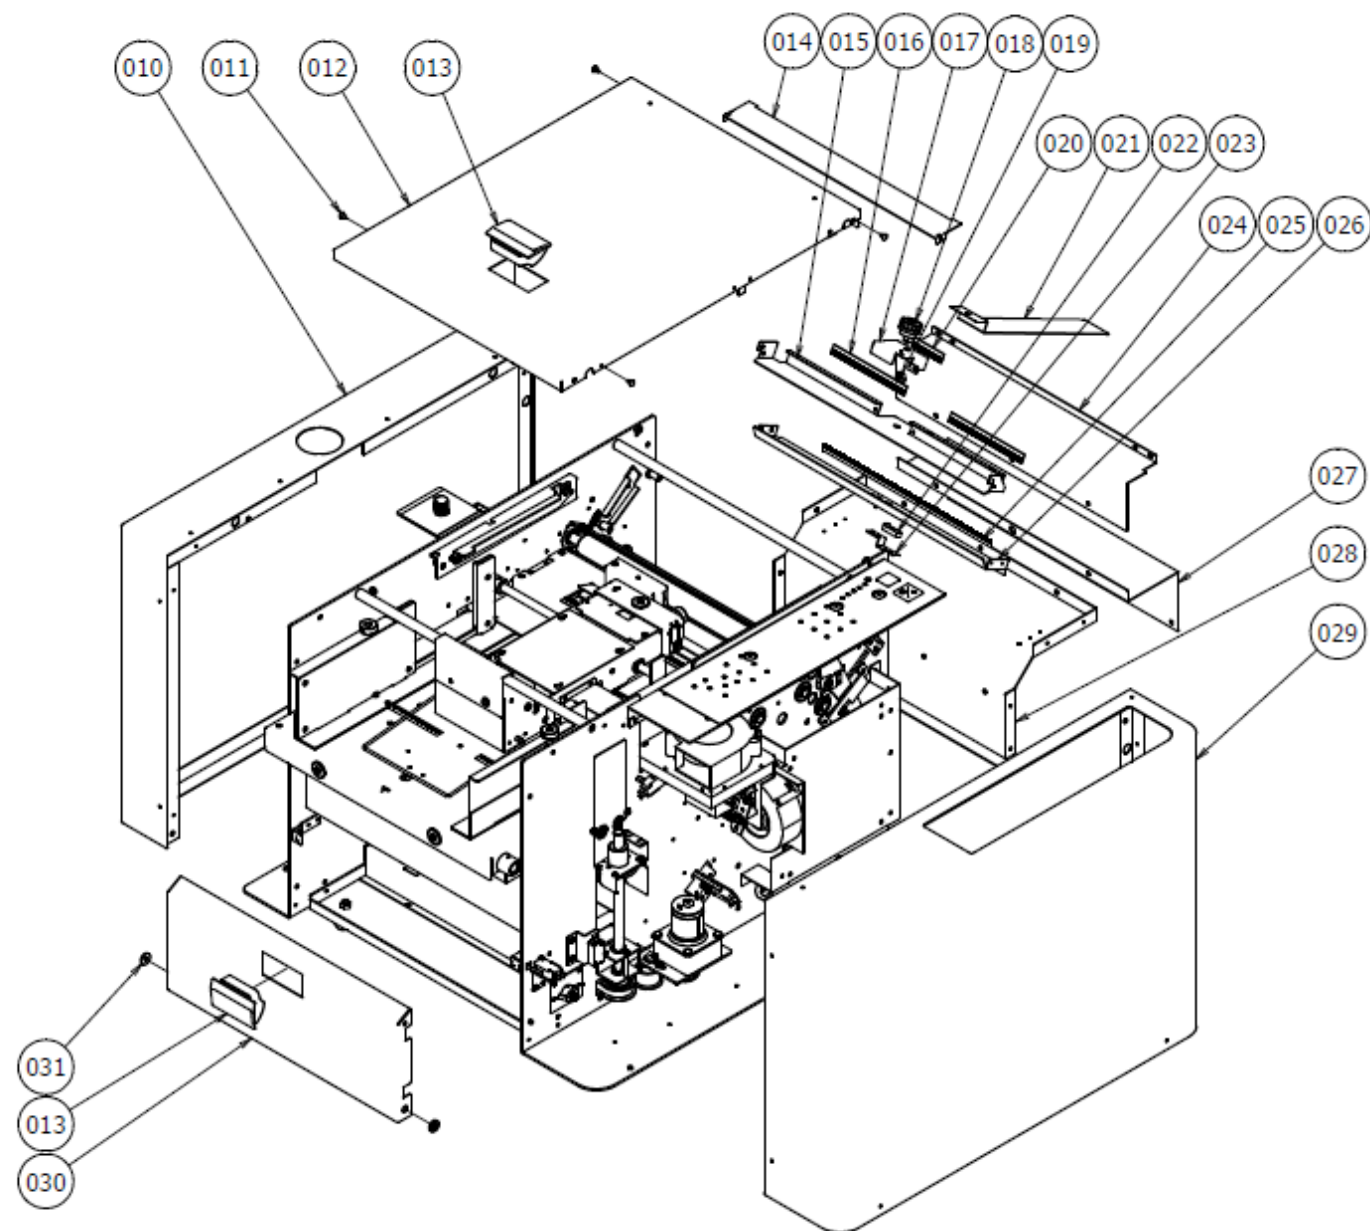


2. A02; Sideplate of the body

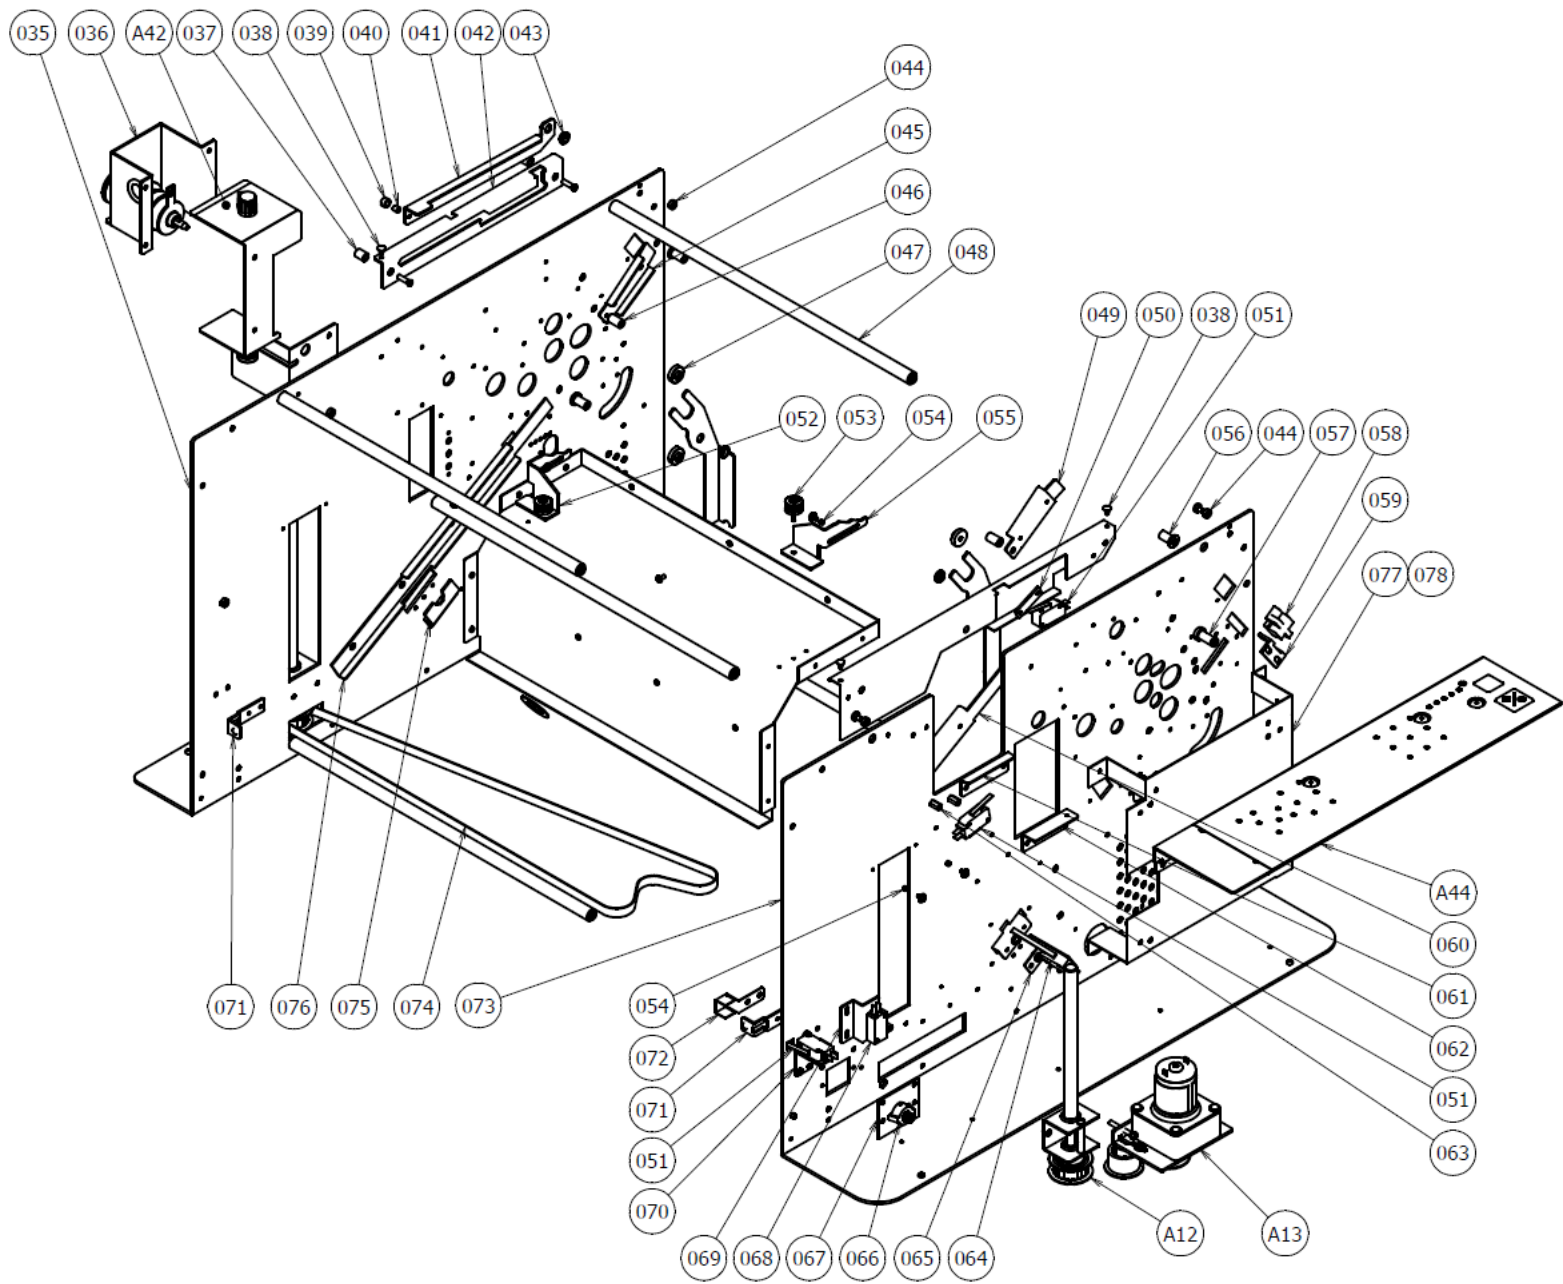


3. A10;Paper feed table

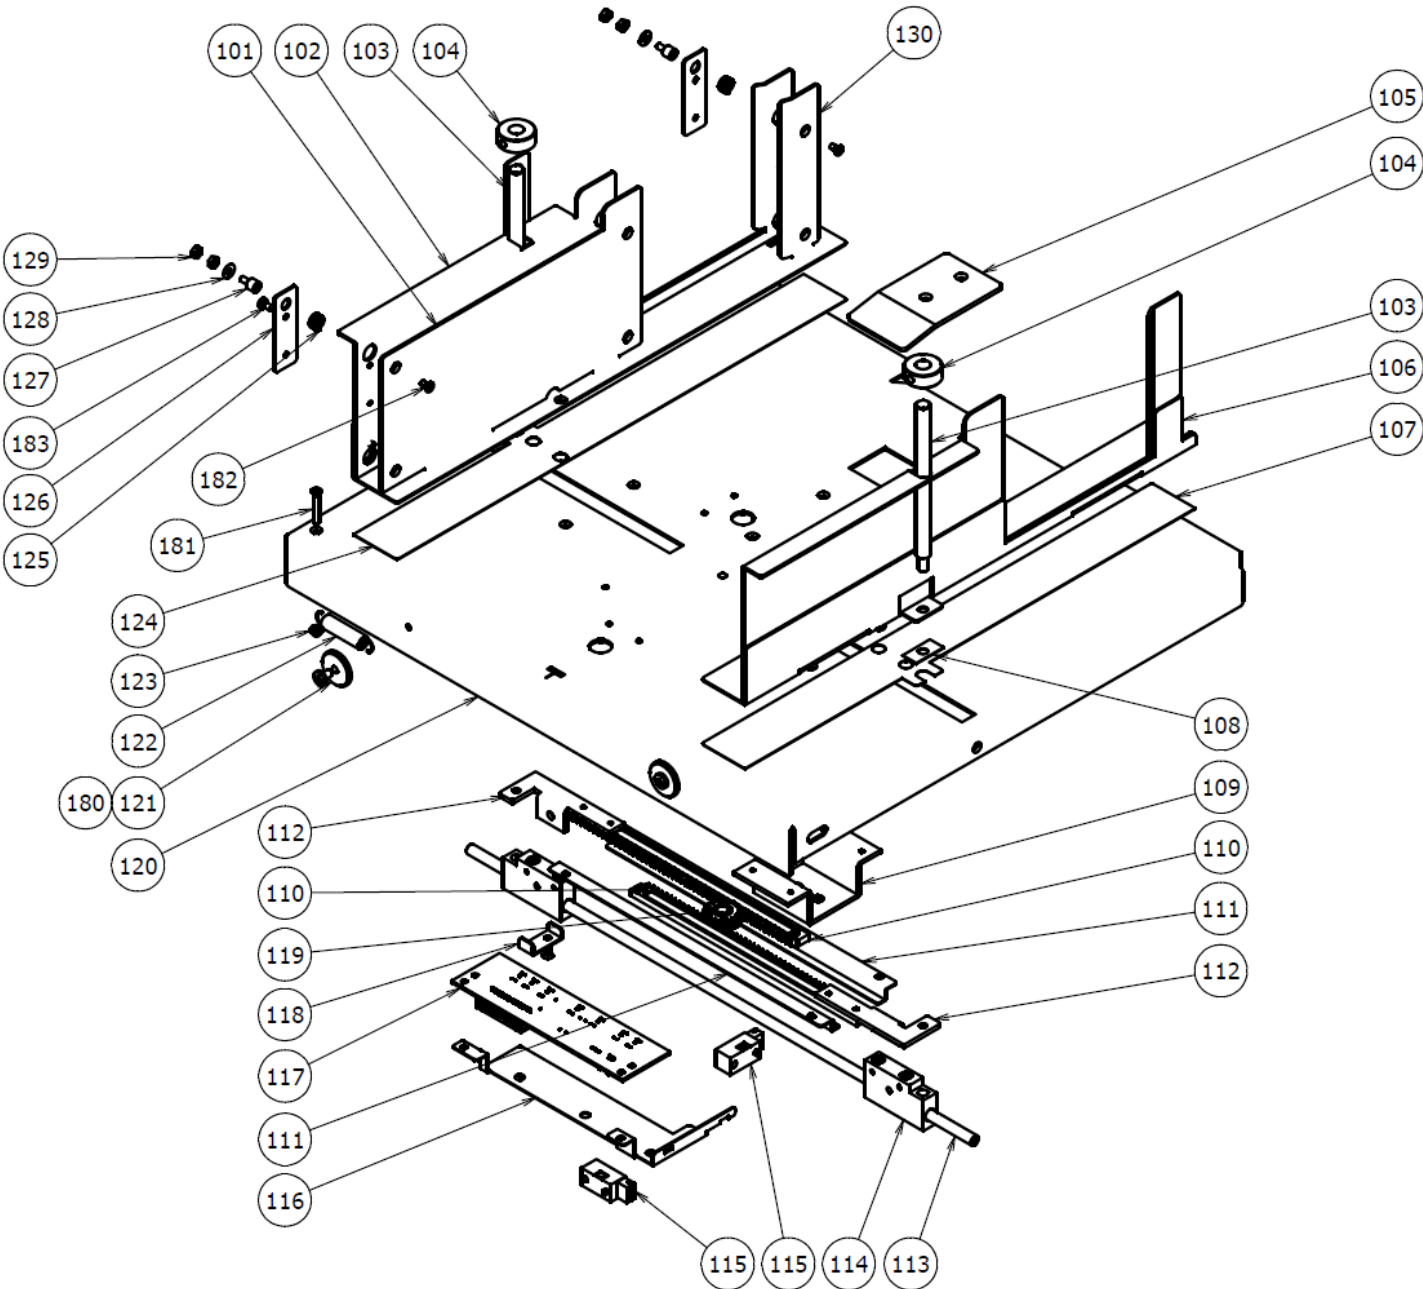


4. A11;Lifting table

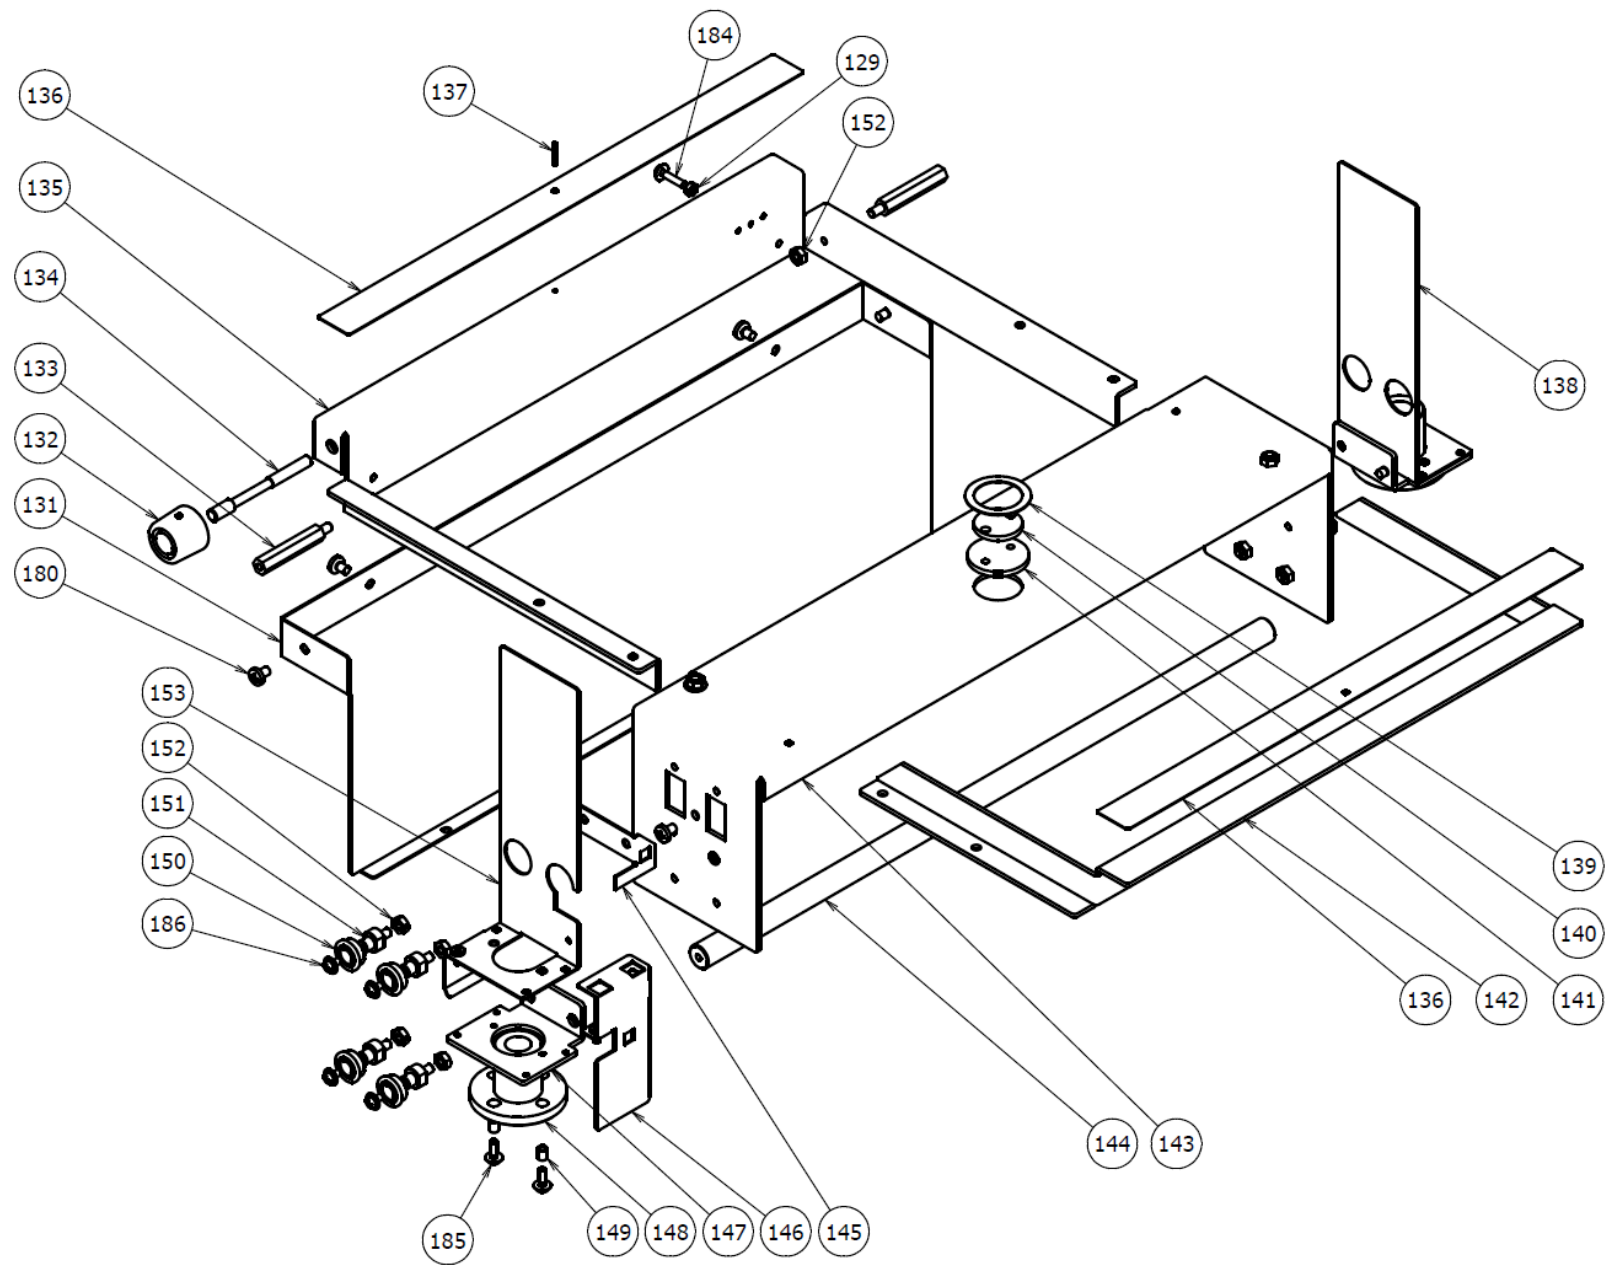


5. A12; Assembly of Lifting screw

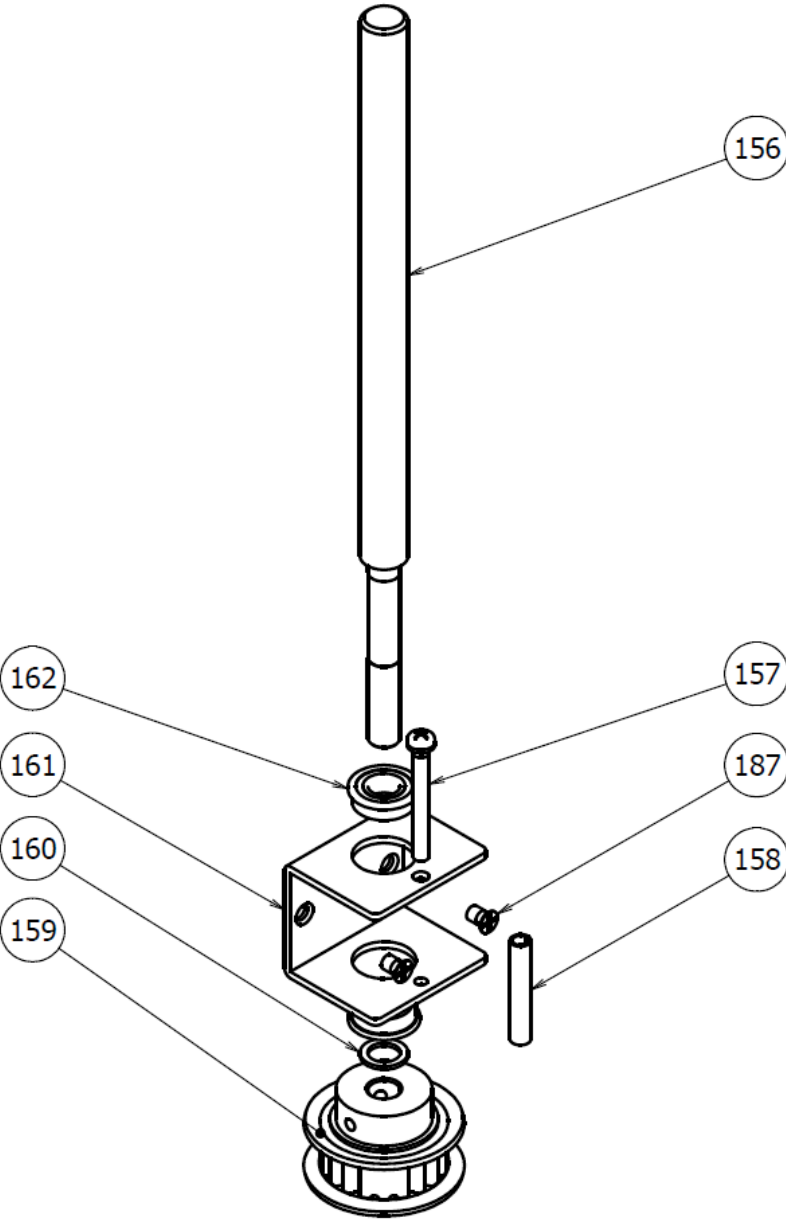


6. A13; Assembly of Lifting motor

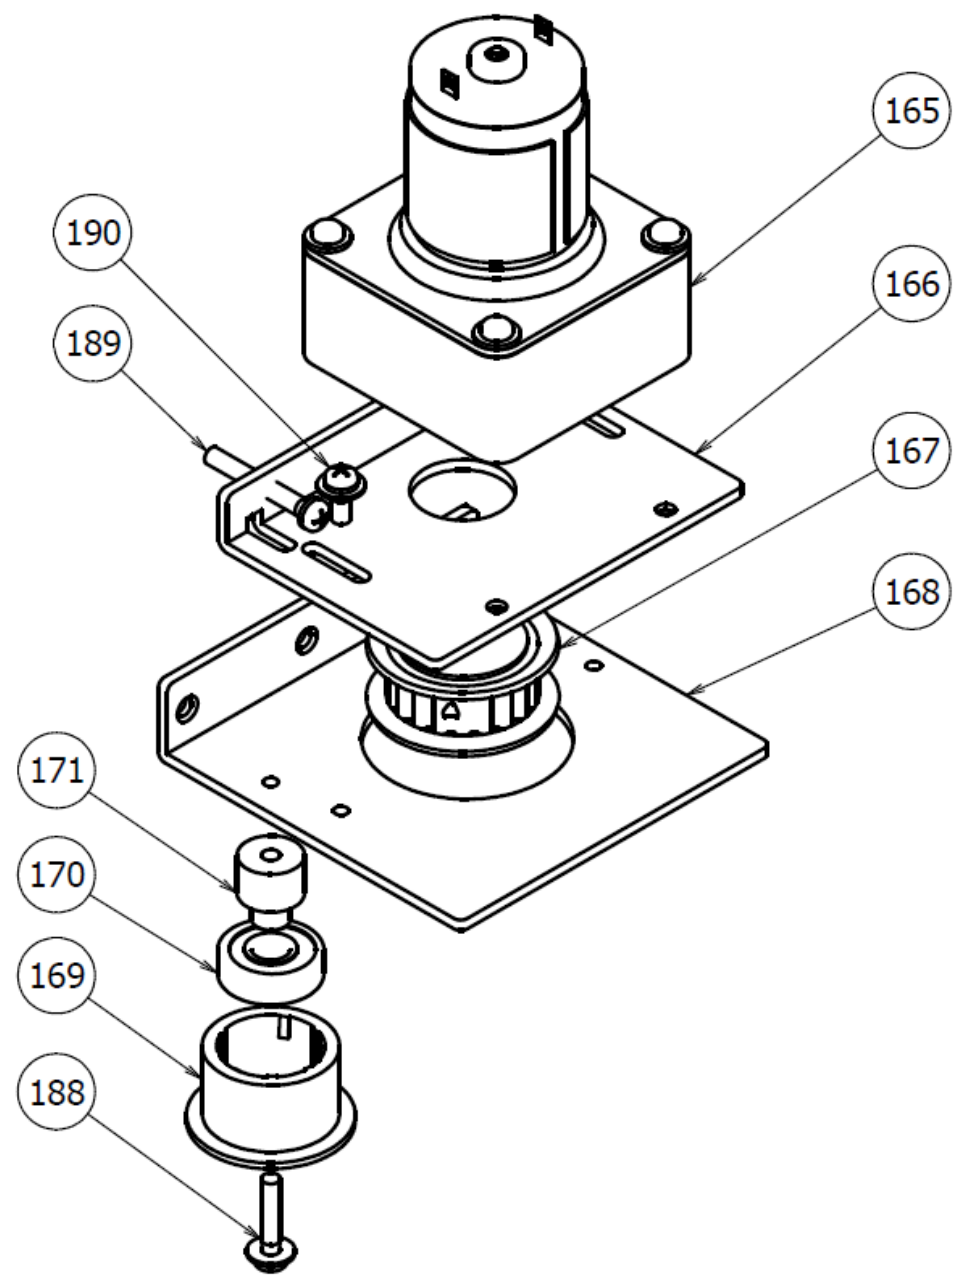


7. A20;Assembly of Paper guide

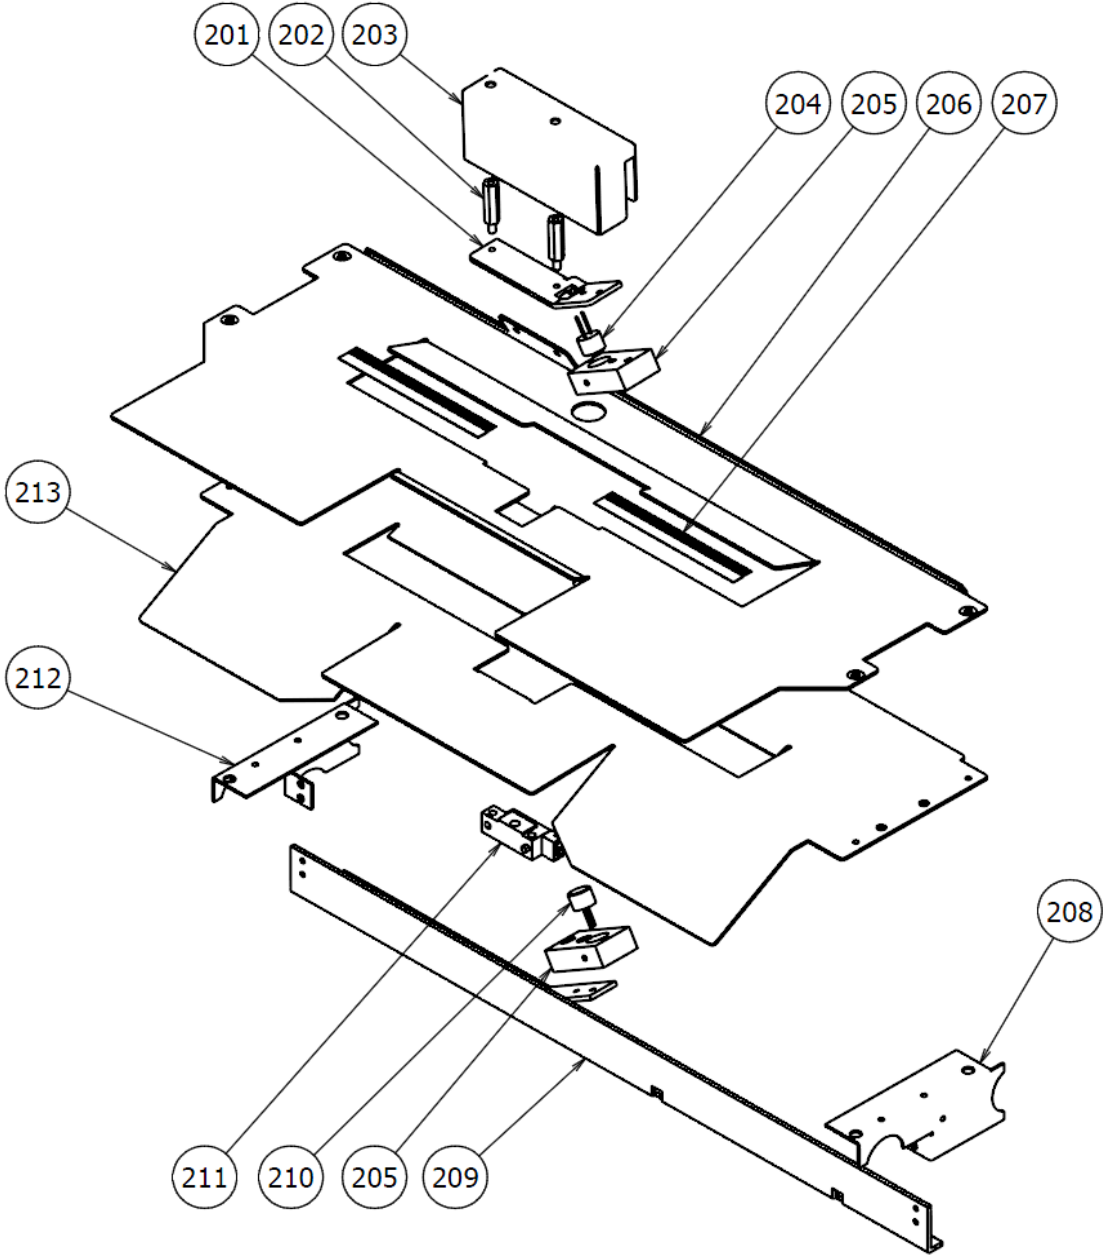


8. A21 ;Interceptor unit

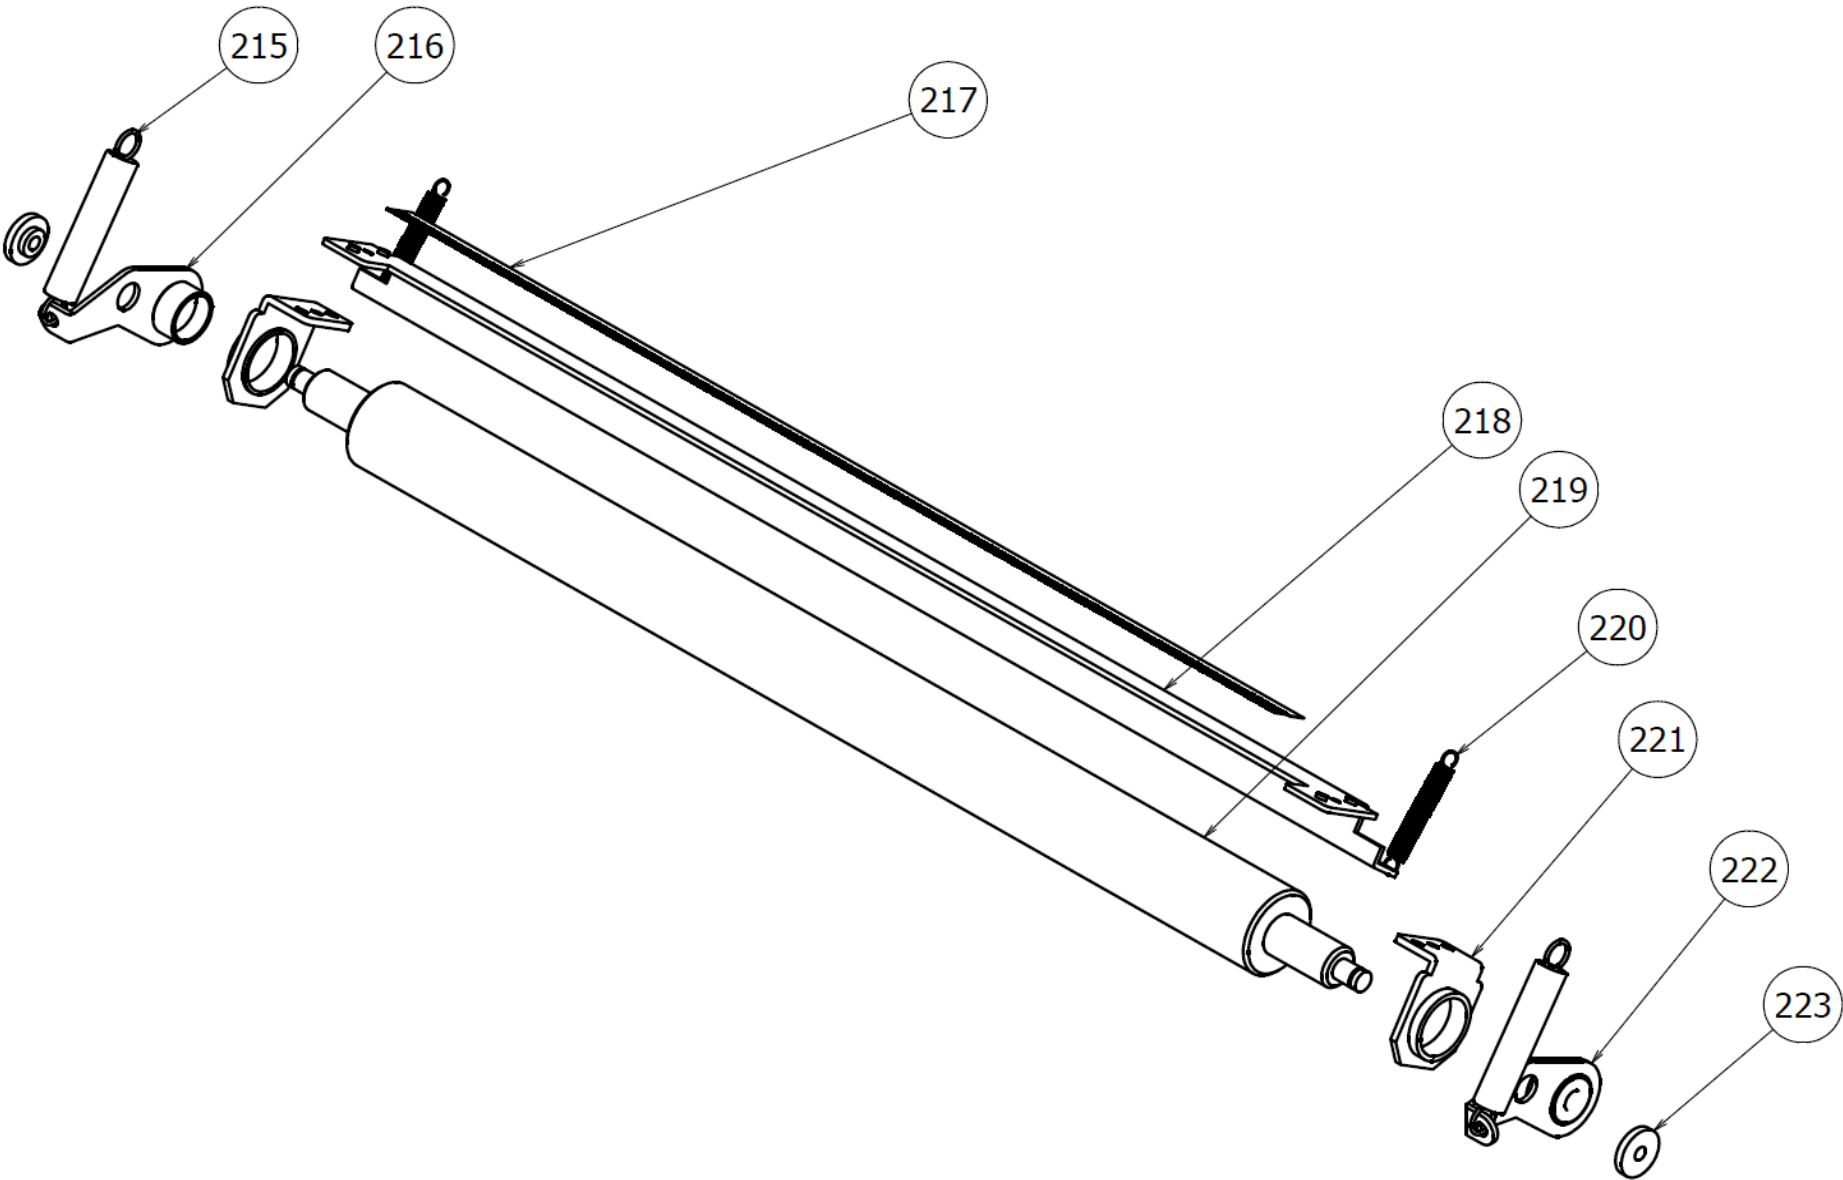





9. A22;Feed roller unit

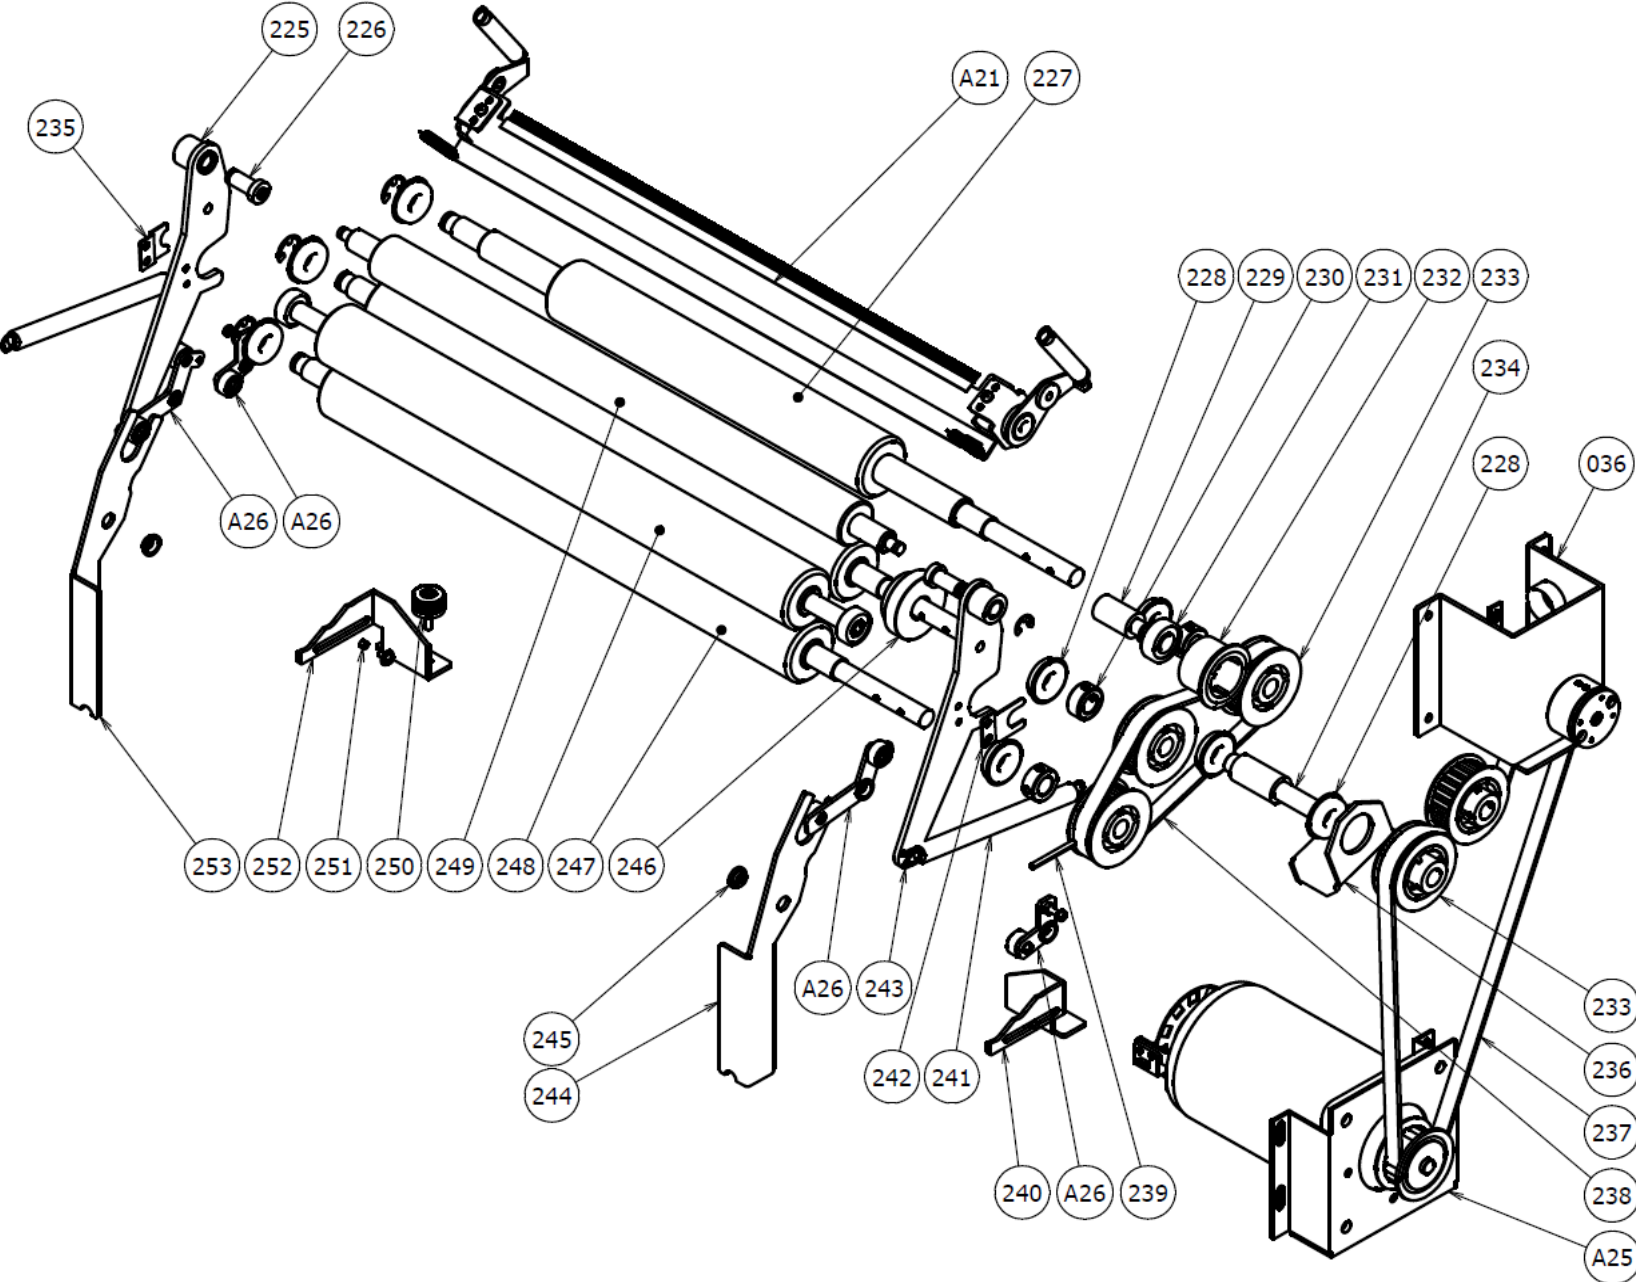

10. A25; Main motor unit

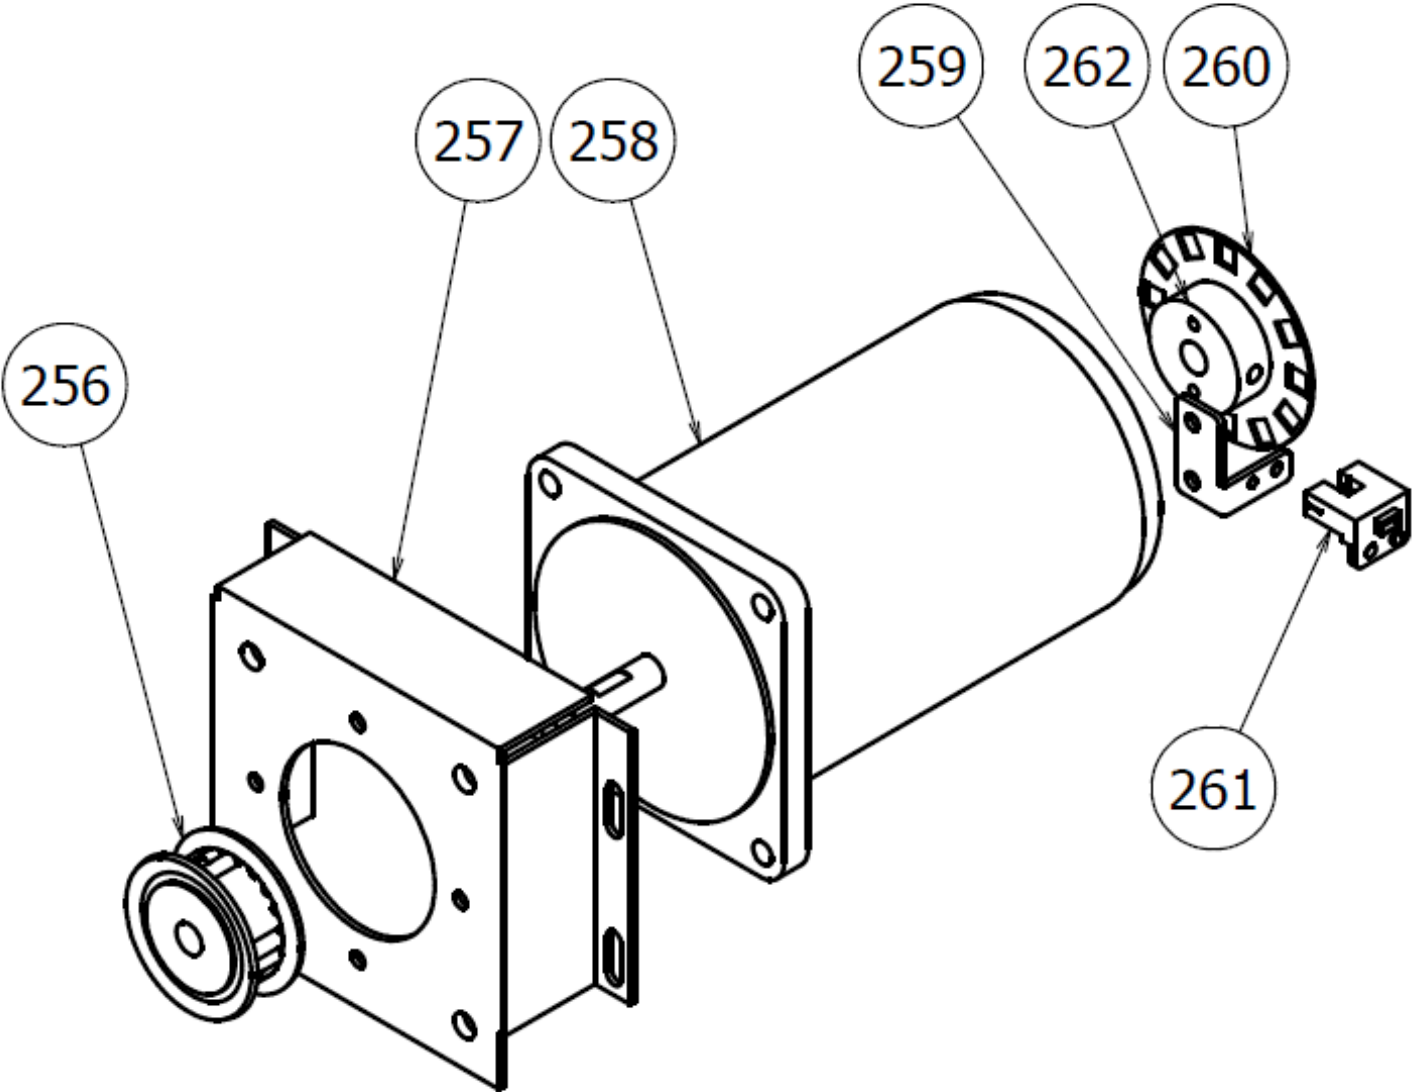


11. A26; Assembly of links

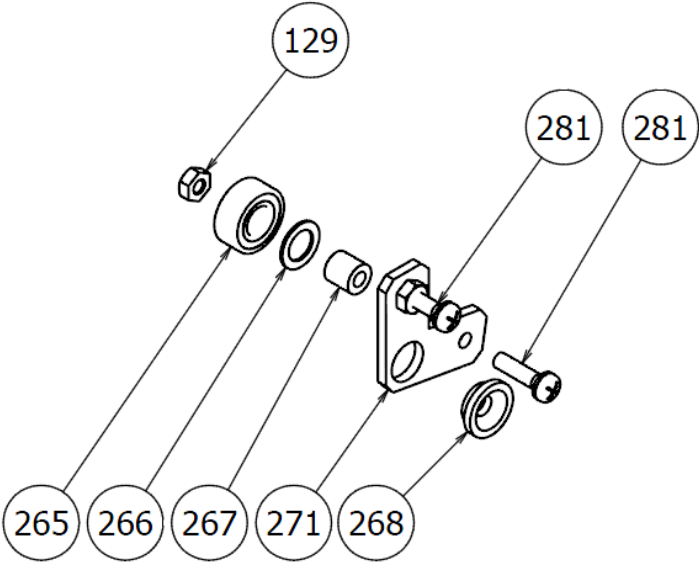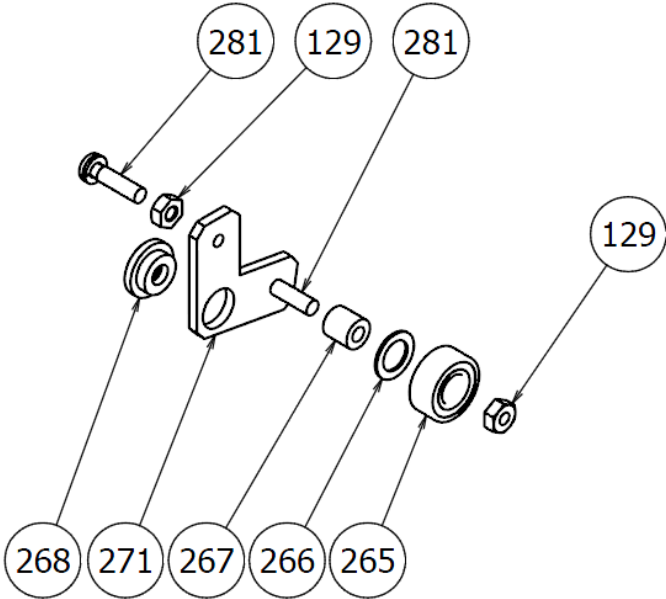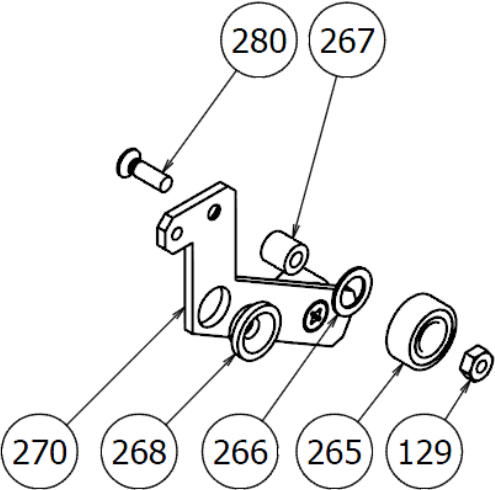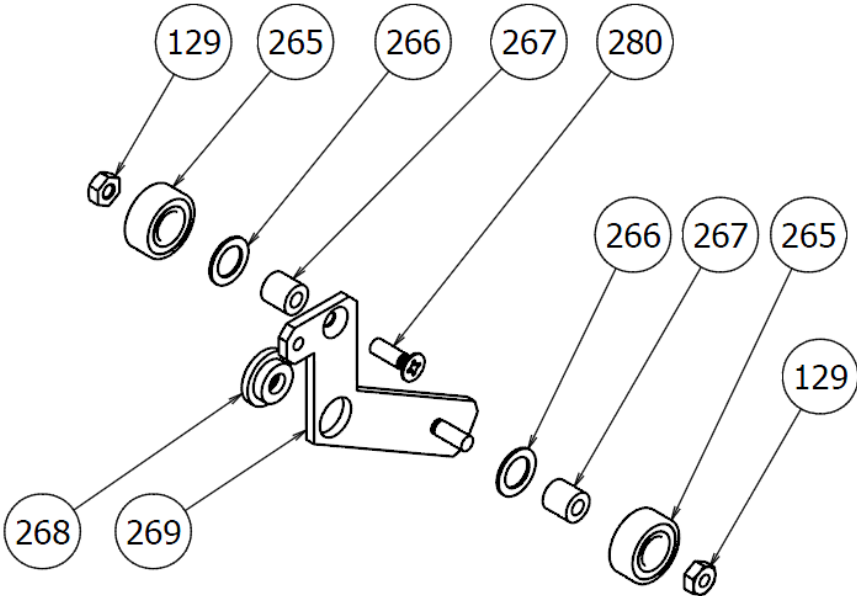


1272-7214 1ST FOLDER TABLE COMPLETE

12. A31;1st Folder table

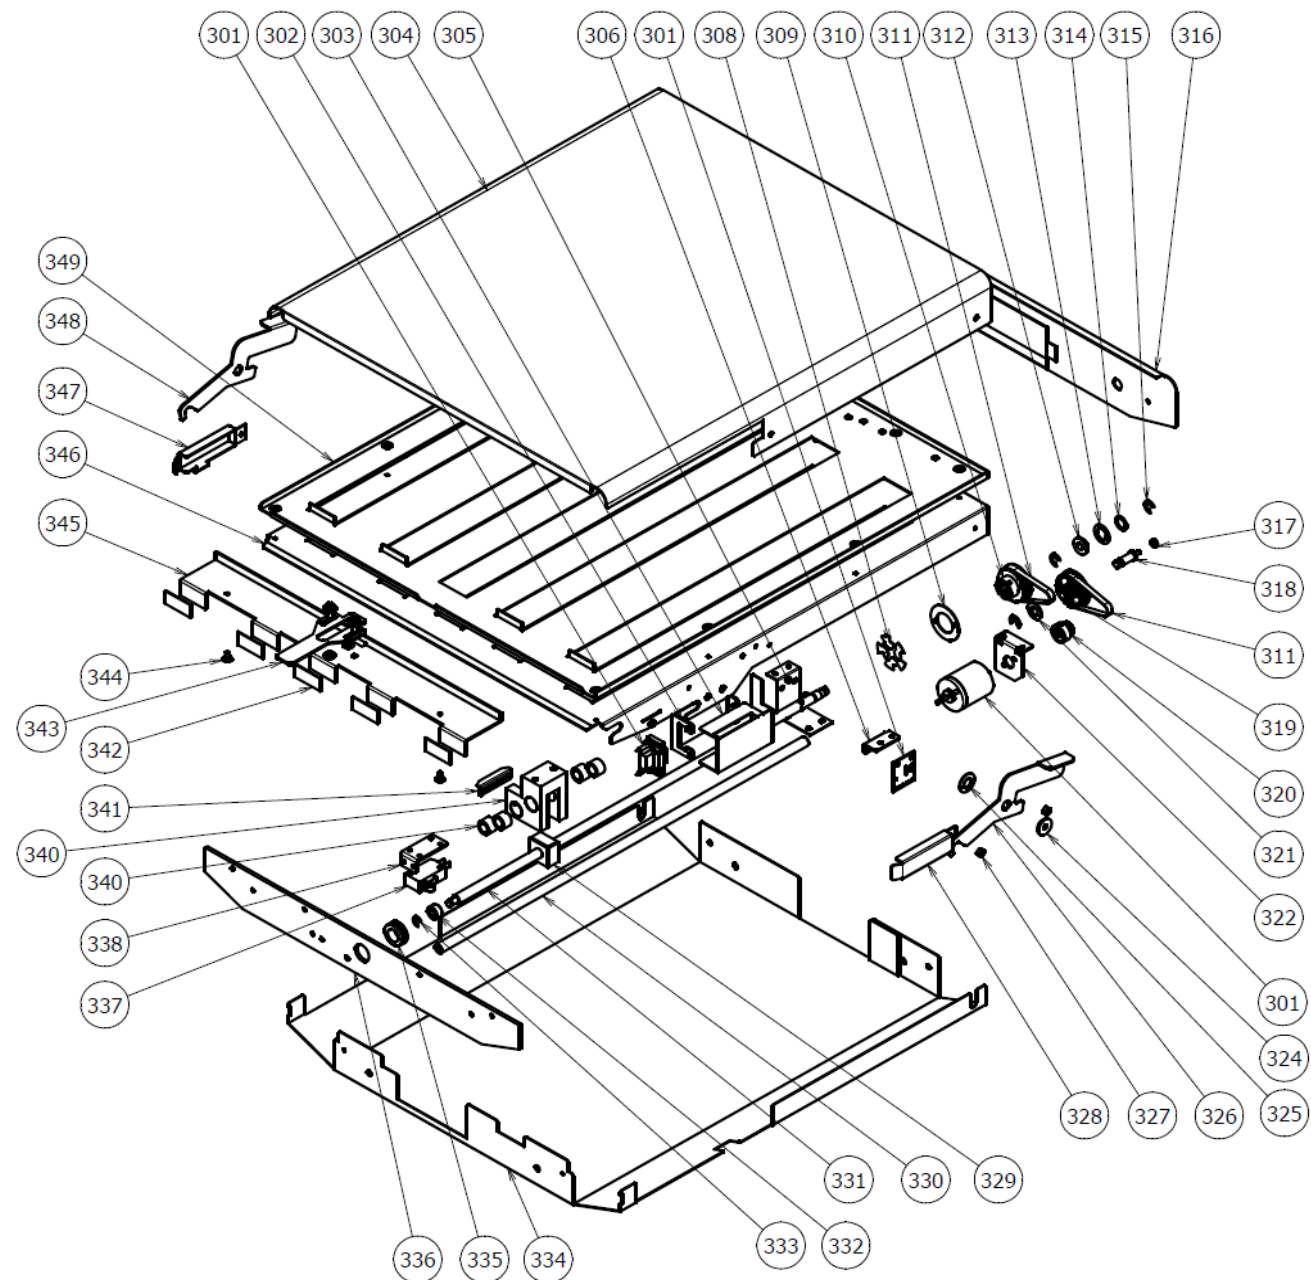

[illegible]

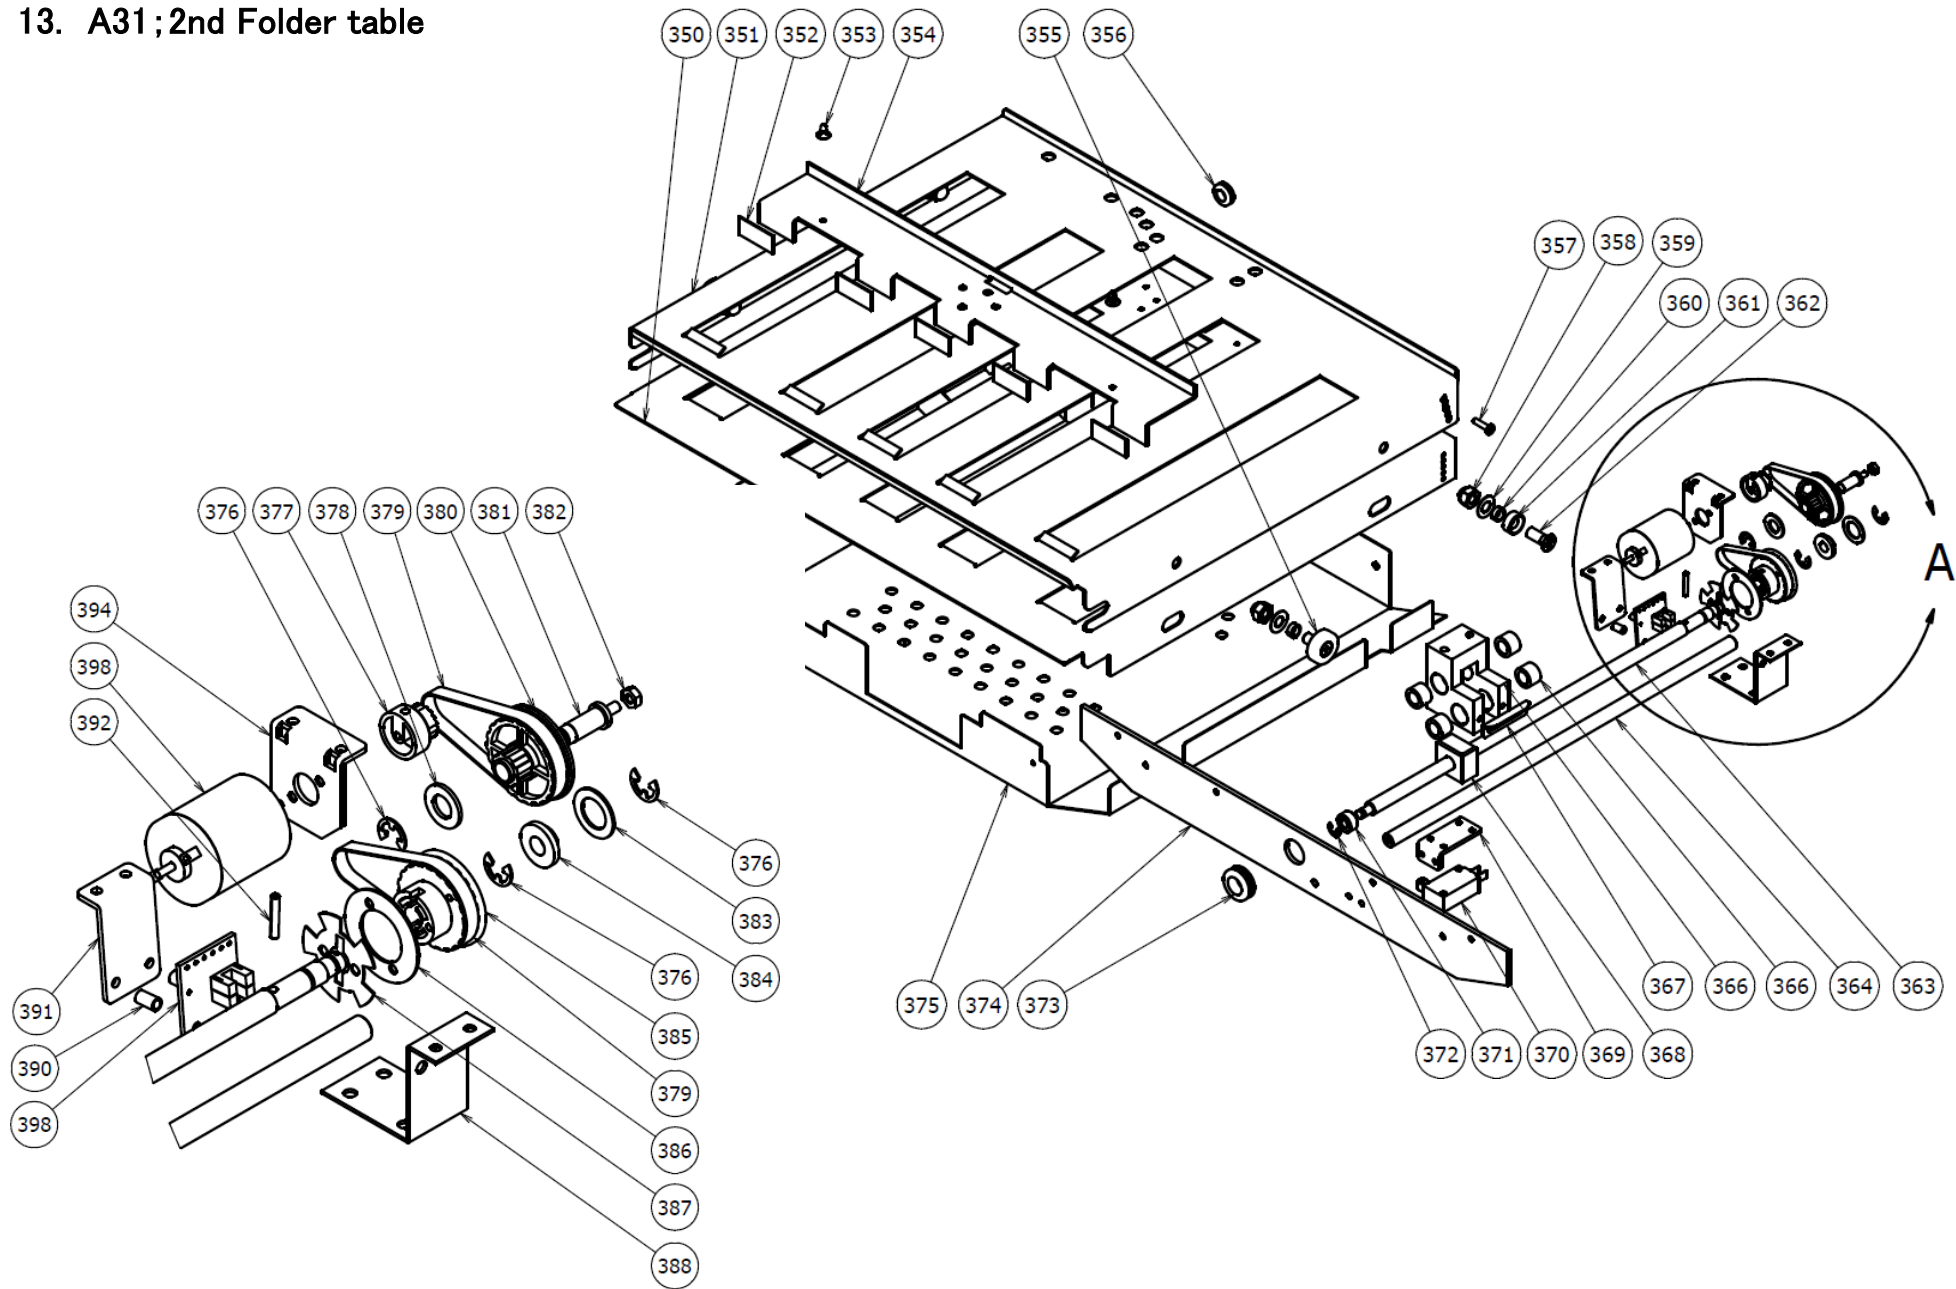


(Detail; A)


Fig. No.	Parts No.	Parts name	Q'ty
350	1272-0304	2nd Folder table under	1
351	1272-0303	2nd Folder table upper	1
352	1262-0371	Stopper cushion rubber	5
353	5262-0528	Push pull ciip	2
354	1262-0303	Stopper plate	1
355	0145-4120	Bearing	2
356	0162-4770	Grommets	1
357	Low head screw	Low head M3x15	2
358	Hexagon cap nut	N6	4
359	Flat washer	W6	4
360	1272-1302	Spacer	4
361	1272-0311	Locating washer	2
362	Countersunk screw	M6(D10)x15	2
363	1262-0311	2nd Table lead screw	1
364	1262-9117	2nd Table guide shaft	1
365	Missing number		
366	1272-0037	Slider block Assy	1
	1262-9118	Slider block	1
	0070-5000	Sintered metal	4
367	1262-0349	Stopper dock	1
368	1262-0344	Table screw nut	1
369	1262-0370	Stopper situs limit switch mounting	1
370	0020-4250	Lead micro switch	1
371	0020-0790	Guide bushing	1
372	Retaining ring-E	E4	1
373	1262-0304	Grommets	1
374	1272-0309	Reinforcement table	1
375	1272-0320	2nd Folder table under cover2	1
376	Retaining ring-E	E5	1
377	0260-4190	Motor pulley	1
378	0260-4160	Idler puller washer	1
379	0260-4180	Timing belt	2
380	0260-4150	Idler pulley	1
381	0260-4140	Shaft idler center	1
382	Hexagon nut	N3	1

[illegible]


14 A40;Baseframe of the body

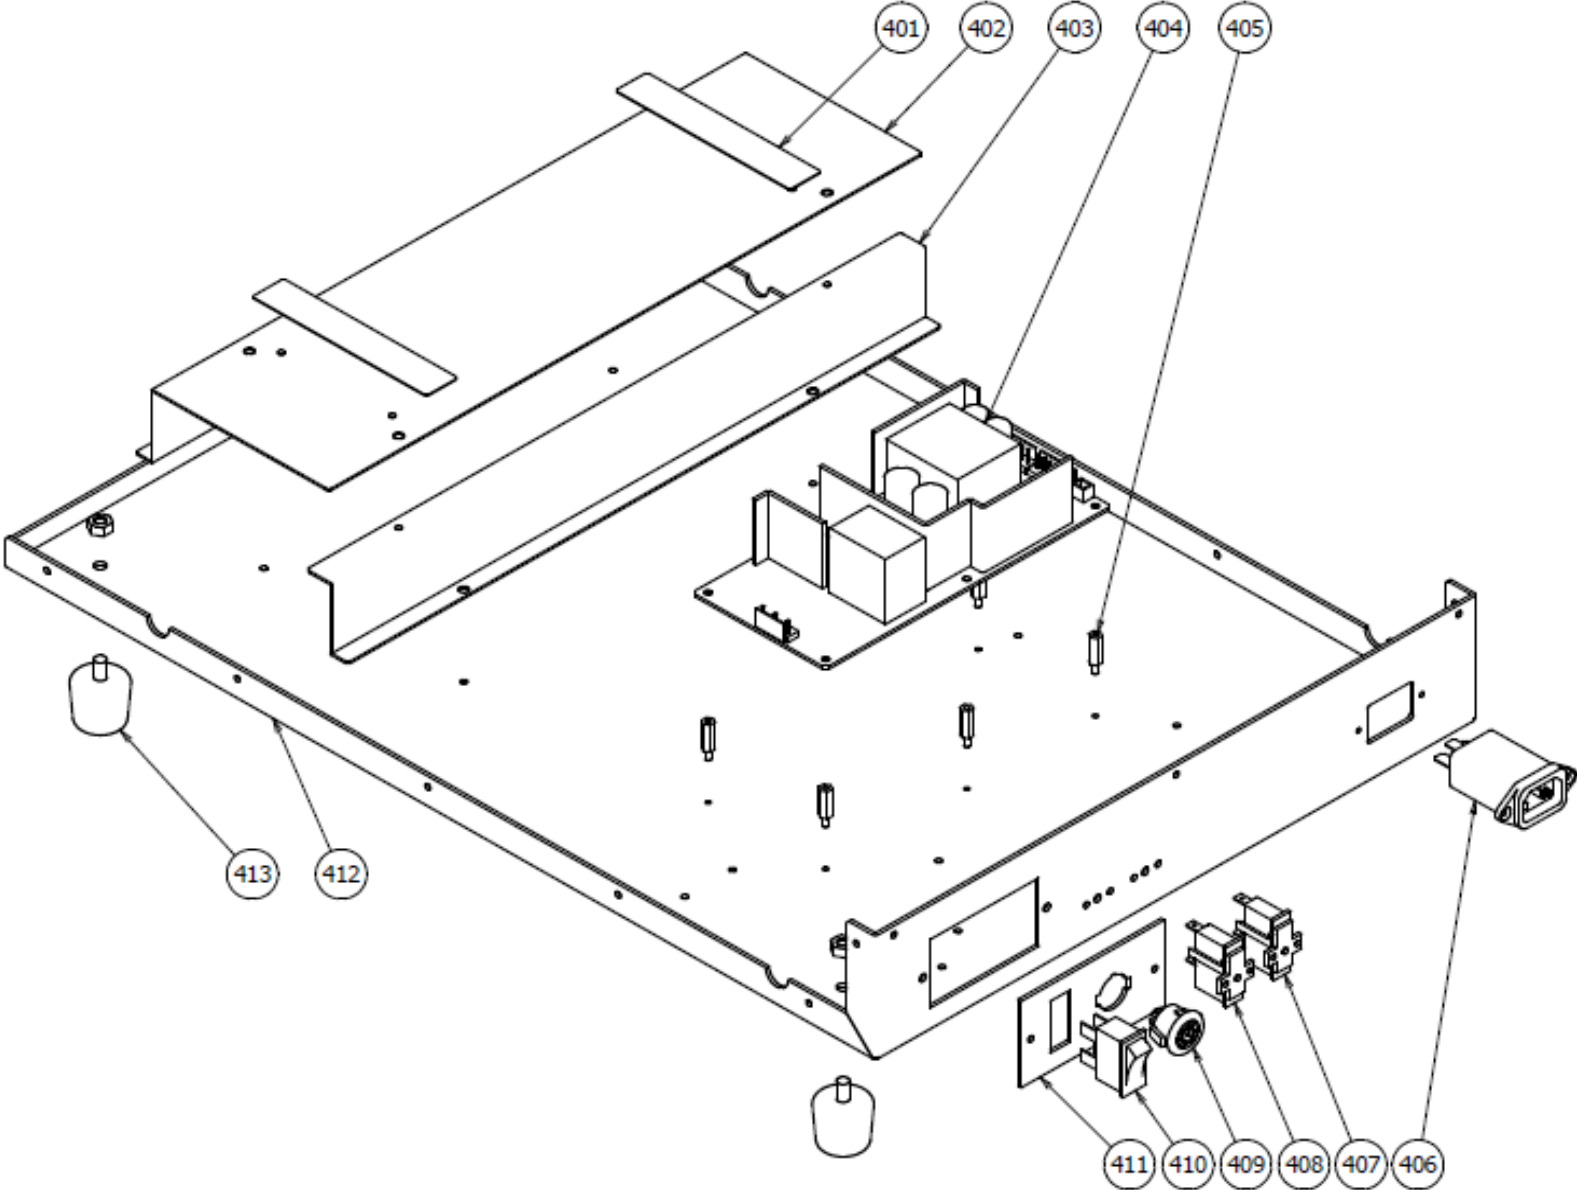


15 A42; Separator air control unit

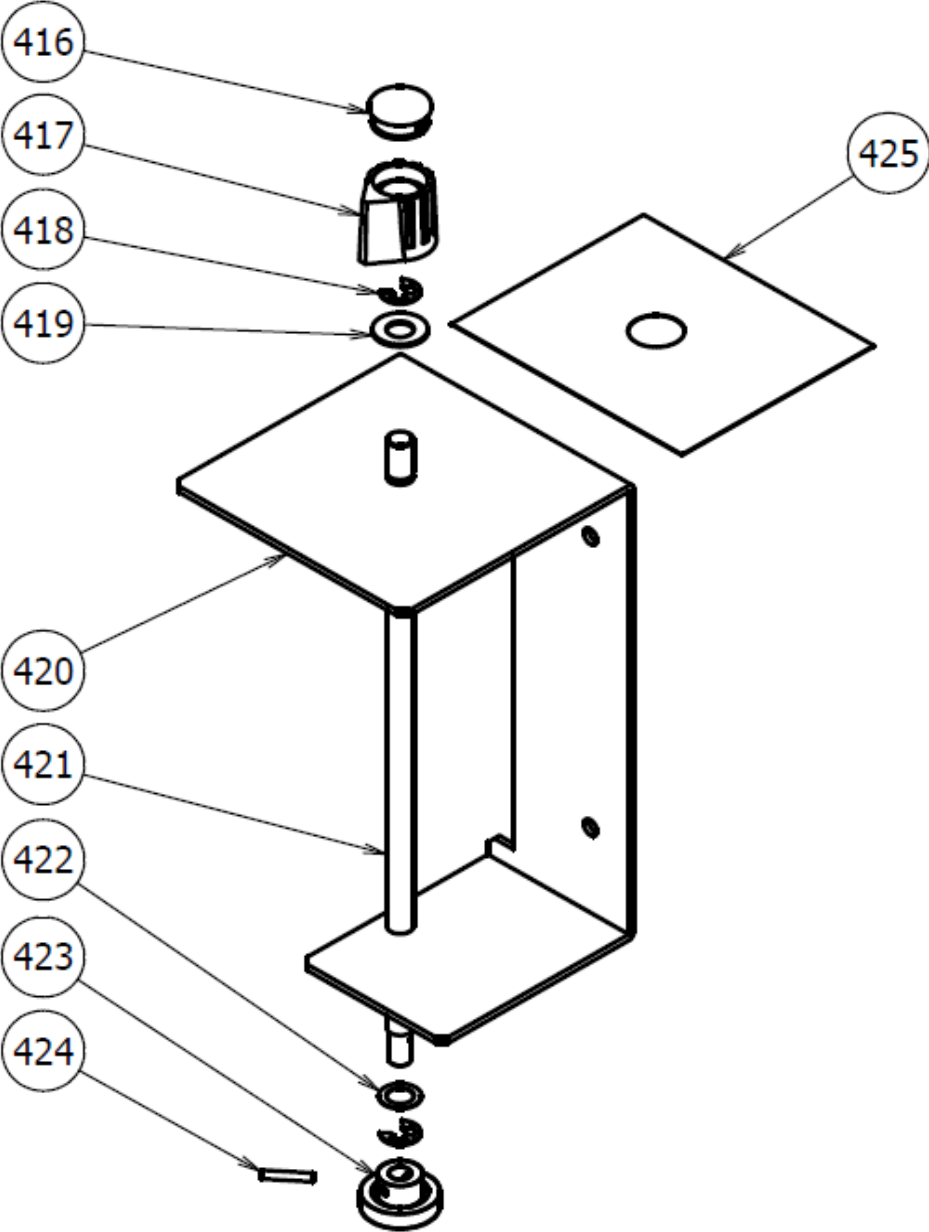


16 A44; Operation switching unit

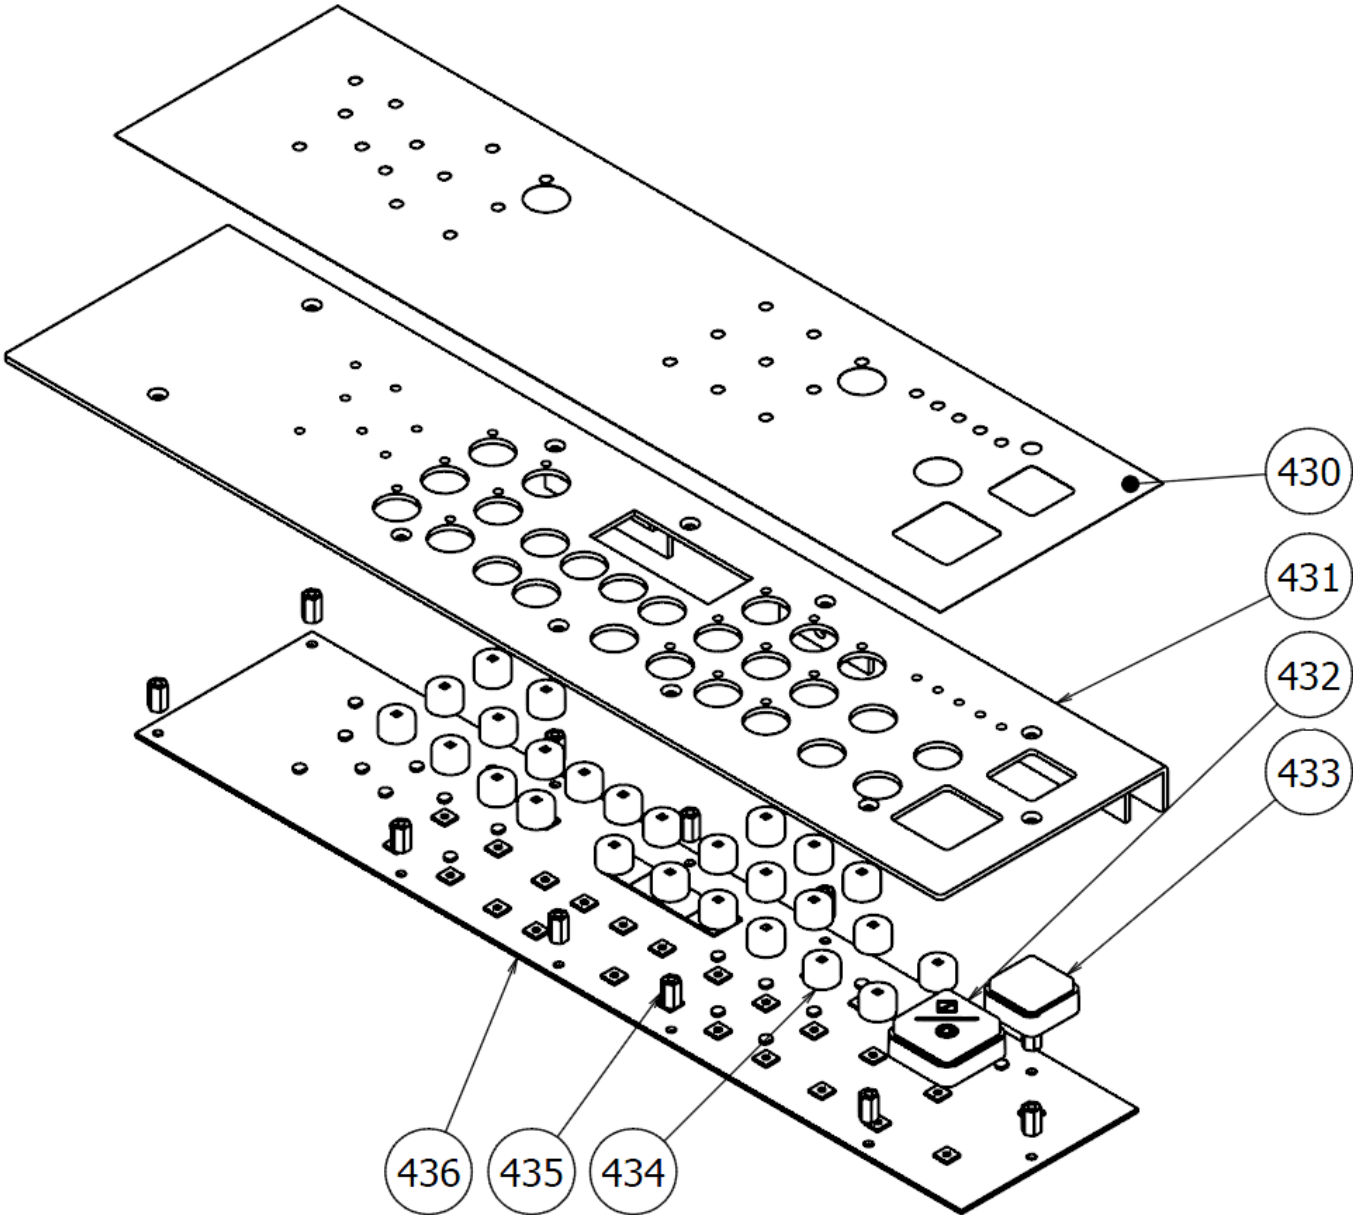

17 A50;Paper ejection table

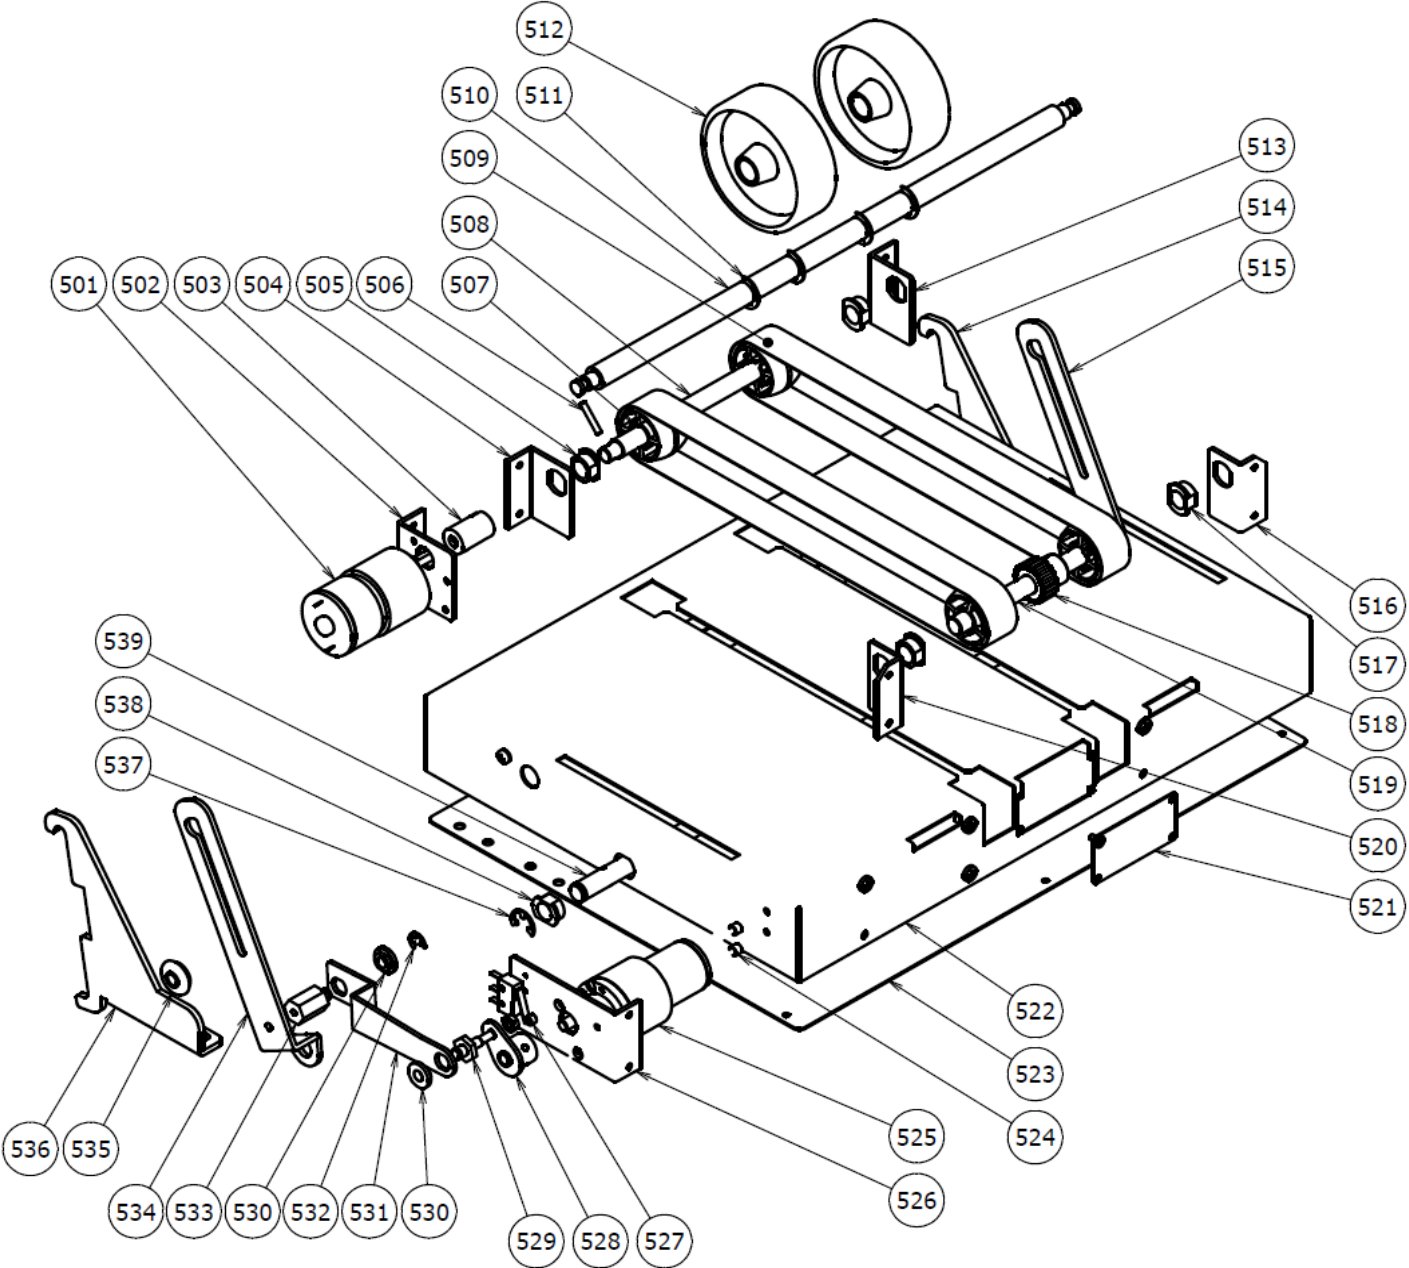

18 A58;Paper ejection auxiliary table

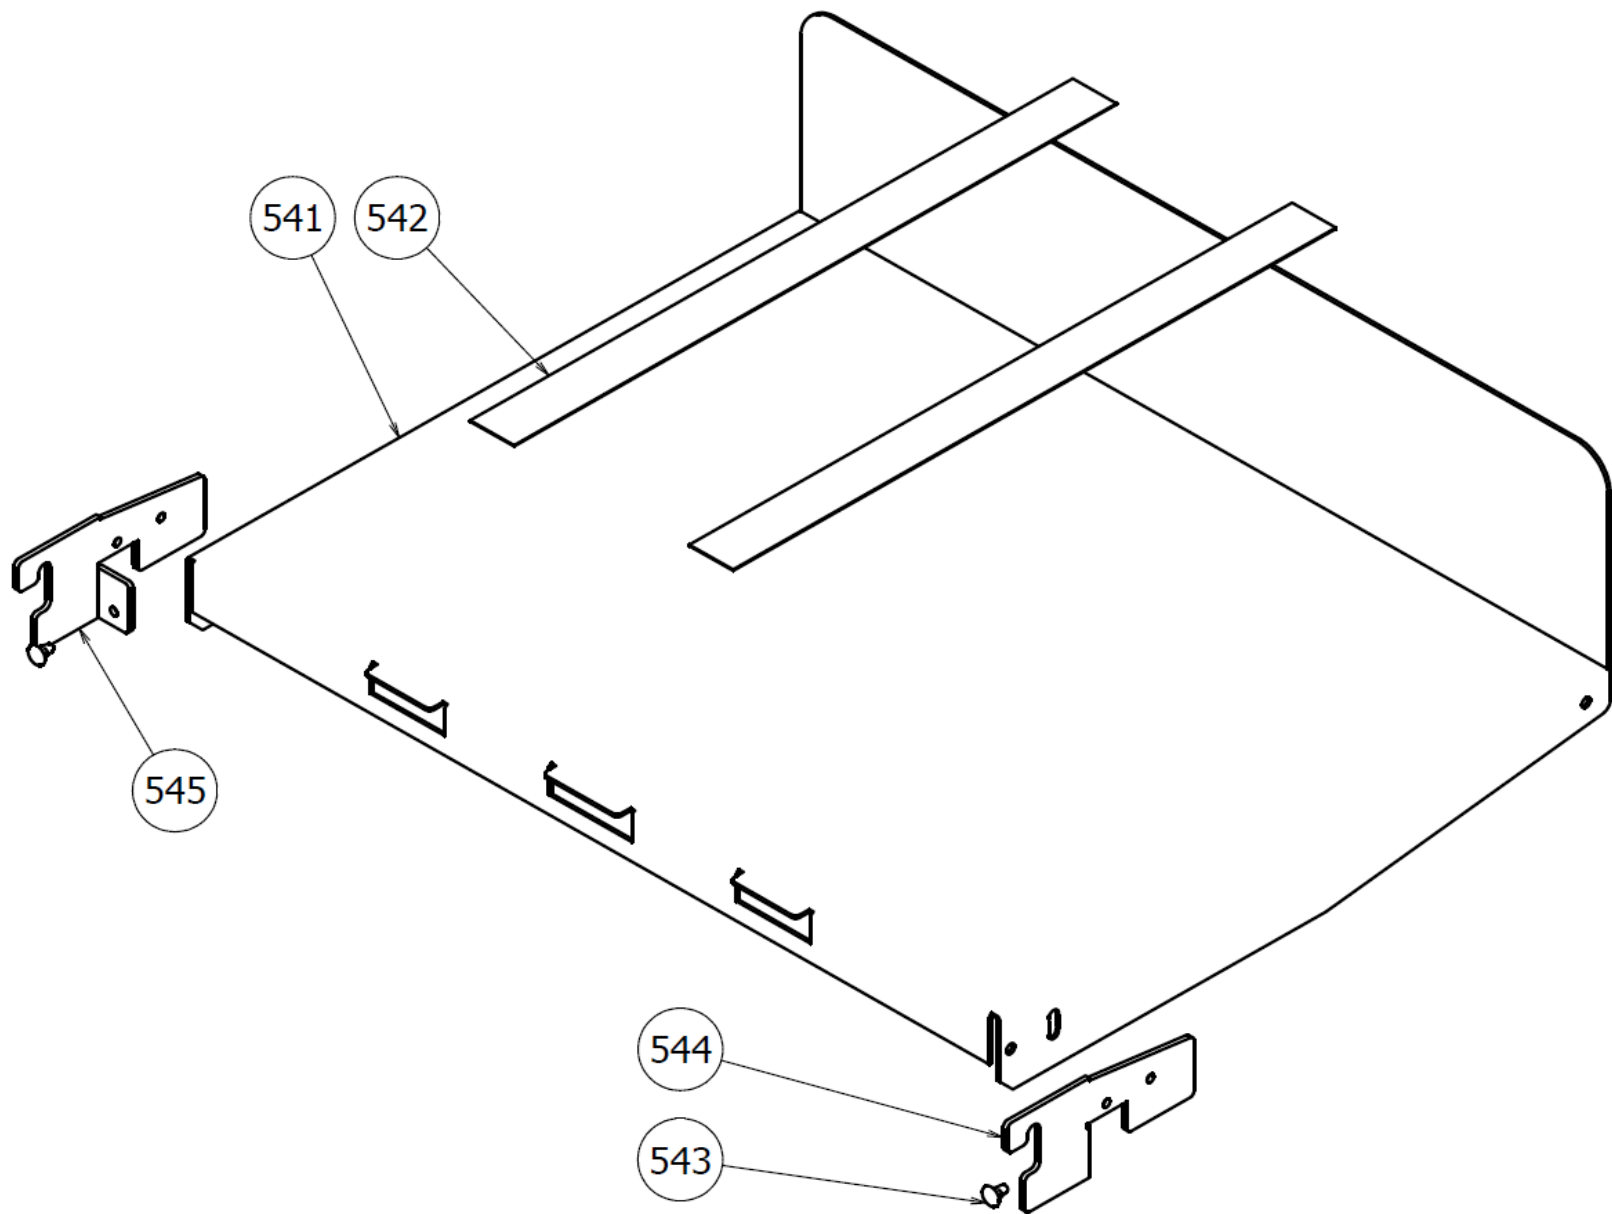

19 A60;Paper suction unit

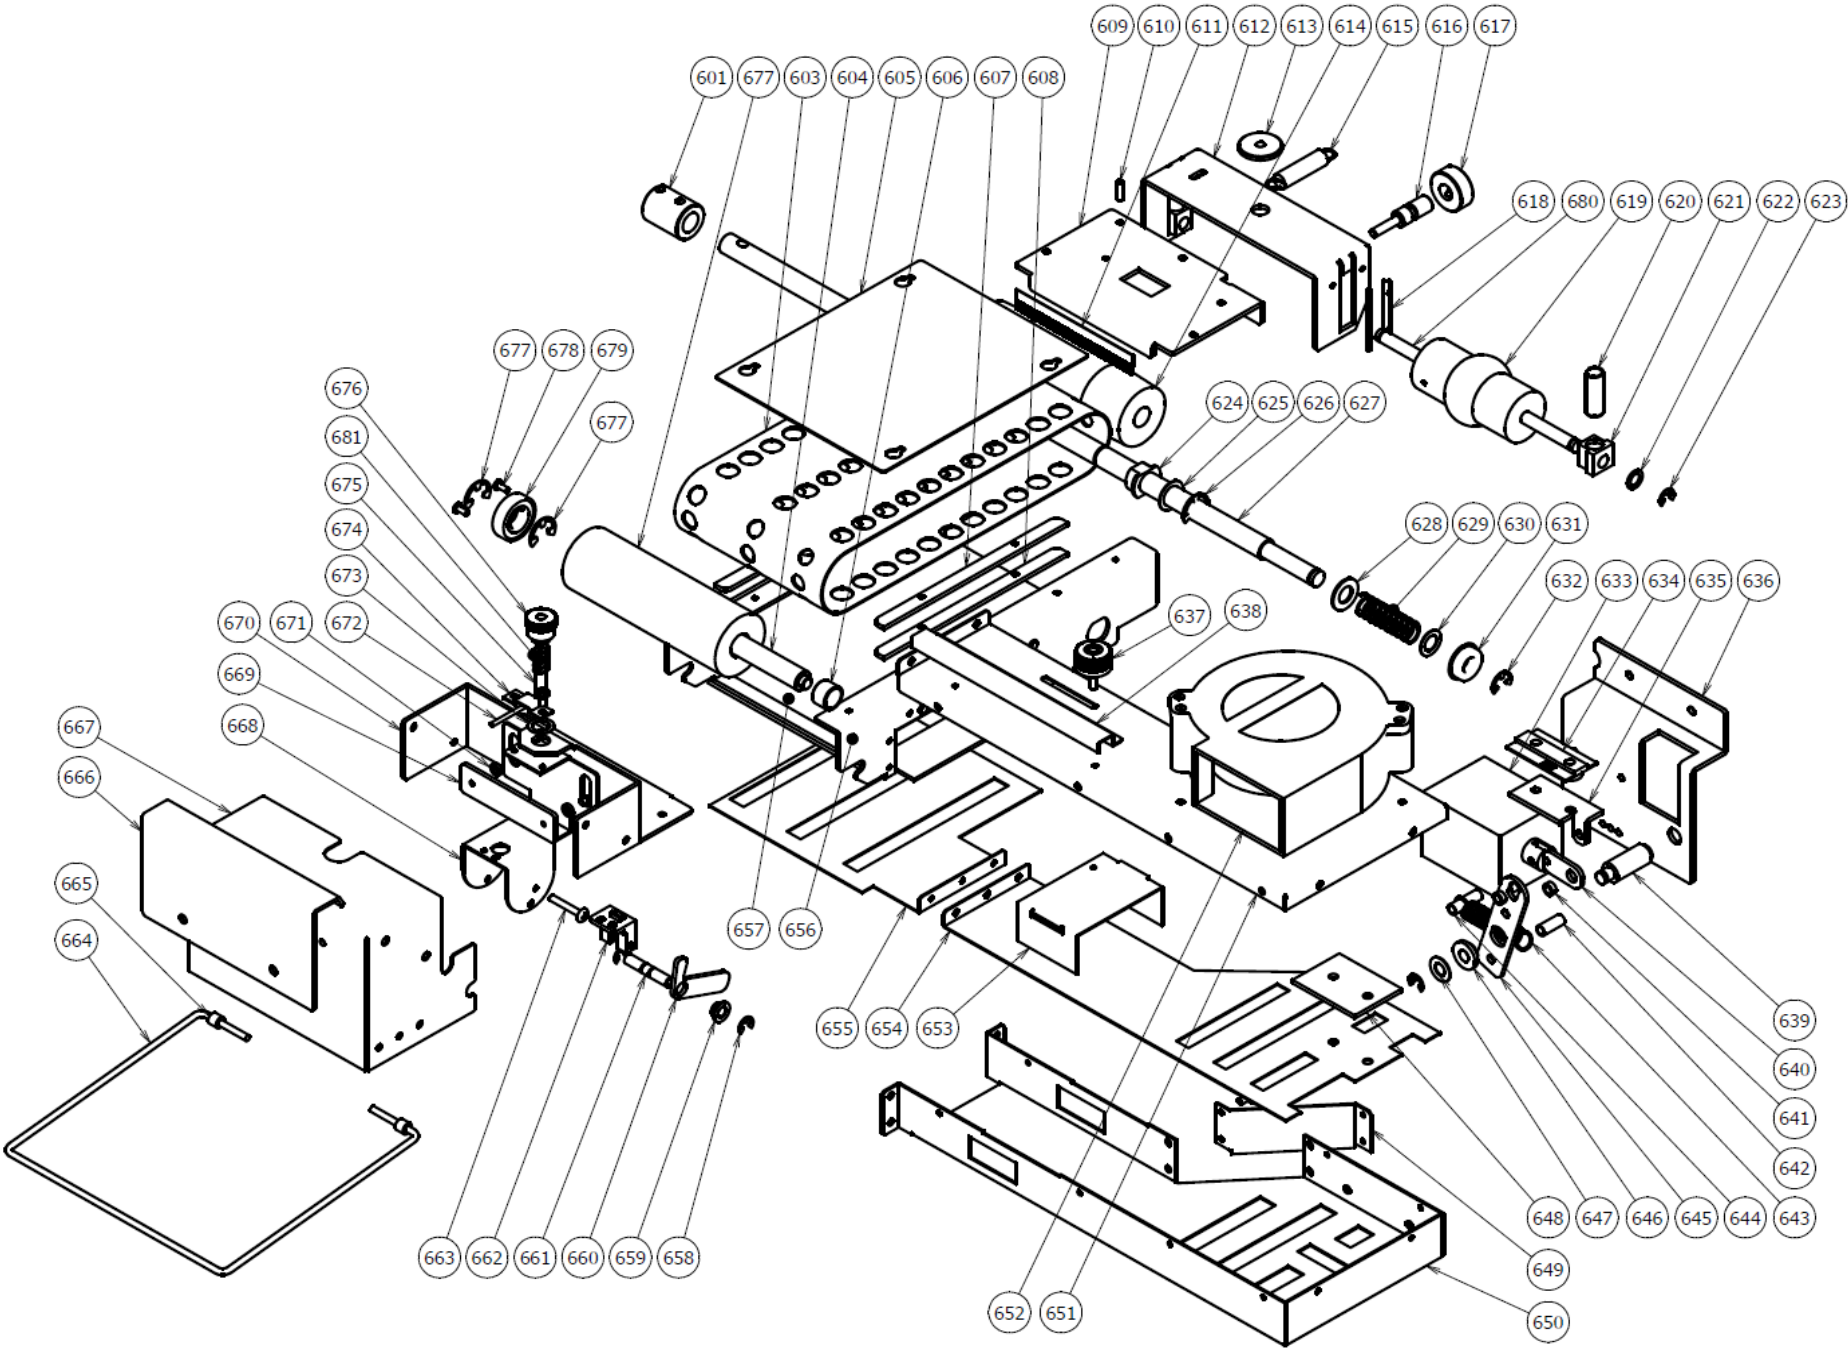


Fig. No.	Parts No.	Parts name	Q'ty
601	1262-0045	Coupler	1
602	1272-0636	Pulley B	1
603	1262-0013	Paper feed hole belt	1
604	1272-0613	Trans shaft	1
605	1272-0605	Cover plate	1
606	8710-0580	Sintered metal	1
607	1272-0609	Belt guide A	2
608	1272-0610	Belt guide B	2
609	1272-0618	Center pulley bracket	1
610	Spring pin	$\phi 3 \times 10$	1
611	1262-0047	Static electric exclusion brush (L75)	1
612	1272-0619	Center pulley guide	1
613	1272-0634	Incline adjustment center	1
614	1272-0635	Crown roller	1
615	1262-9011	Tension spring	1
616	1262-9009	Incline adjustment shaft	1
617	1262-0105	Knob	1
618	4149-0141	Separator weight	4
619	1262-0044	Center pulley	1
620	1262-0056	Compression Spring	2
621	0145-1170	POM Bearing A	2
622	1262-7303	Polyslider spacer	2
623	Retaining ring-E	E4	2
624	0145-4170	Sintered metal	2
625	1262-7310	Polyslider spacer	2
626	Retaining ring-E	E8	2
627	1262-0014	Drive shaft A	1
628	Flat washer	W8	1
629	0145-2330	Drive shaft spring	1
630	8900-2726	Clutch spacer washer	1
631	0146-4450	Bearing	1
632	Retaining ring-E	E6	1
633	1262-7145	Solenoid unit Assy	1
	5262-0502	Solenoid	1
	0100-5620	Socket contact	2
	0100-5610	Plug housing	1
634	1262-0048	Rejection paper guide installation board	1
635	1262-0024	Link plate (D)	1
636	1272-0607	Solenoid mounting plate	1
637	1262-9070	Dimple knob	1
638	1272-0627	Wiring duct	1
639	1262-0021	Shaft	1
640	1262-0015	Link (B)	1
641	1262-0033	Collar	2

Fig. No.	Parts No.	Parts name	Q'ty
642	1265-0110	Pipe spacer	1
643	9262-9002	Tension spring	1
644	1263-0041	Pipe spacer	1
645	1262-0023	Link plate ©	1
646	0146-9540	Sintered metal	1
647	Flat washer	W6	1
648	1272-0628	Plate washer	1
649	1272-0630	Suction duct part A	1
650	1272-0601	Suction duct under part	1
651	1272-0602	Suction duct upper part	1
652	1272-7129	Suction fan motor Assy	1
	0100-5620	Socket contact	
	0100-5610	Plug housing	
653	1272-0611	Suction air control shutter	1
654	1272-0632	Suction shutter B	1
655	1272-0631	Suction shutter A	1
656	1272-0603	Belt holder	1
657	1272-0606	Suction chamber	1
658	Retaining ring-E	E4	2
659	5262-0523	Oilless Bush	1
660	1272-0604	Actuator	1
661	1262-0701	Shaft	1
662	0260-7780	Built-in photo sensor	1
663	Round head screw	RKSW3x20	1
664	1272-0608	Weight arm	1
665	1264-0013	Rubber bush	2
666	1272-0626	Suction unit mounting plate	1
667	1272-0617	Sensor cover	1
668	1272-0616	Sensor bracket	1
669	1272-0615	Plate nut	1
670	1272-0612	Sensor bracket mounting plate	1
671	1777-1312	Spacer	2
672	1265-0217	Stainless shaft	1
673	1262-7306	Polyslider spacer	1
674	1272-0633	Mounting plate	1
675	1265-0209	Control screw	1
676	1265-0208	Control nut	1
677	Retaining ring-E	E8	2
678	1262-0049	Low head screw M2.5	2
679	5148-0444	Bearing	1
680	1262-0043	Center shaft	1
681	1777-0257	Compression Spring	1

20 A65; Paper separator unit

